




PARTS CATALOGUE

**ECHO
POWER SPRAYER
SHP-800**

***i* SHP-800S**


***i* SHP-800BS**

SHP-800 1 Cylinder, Crankcase, Piston

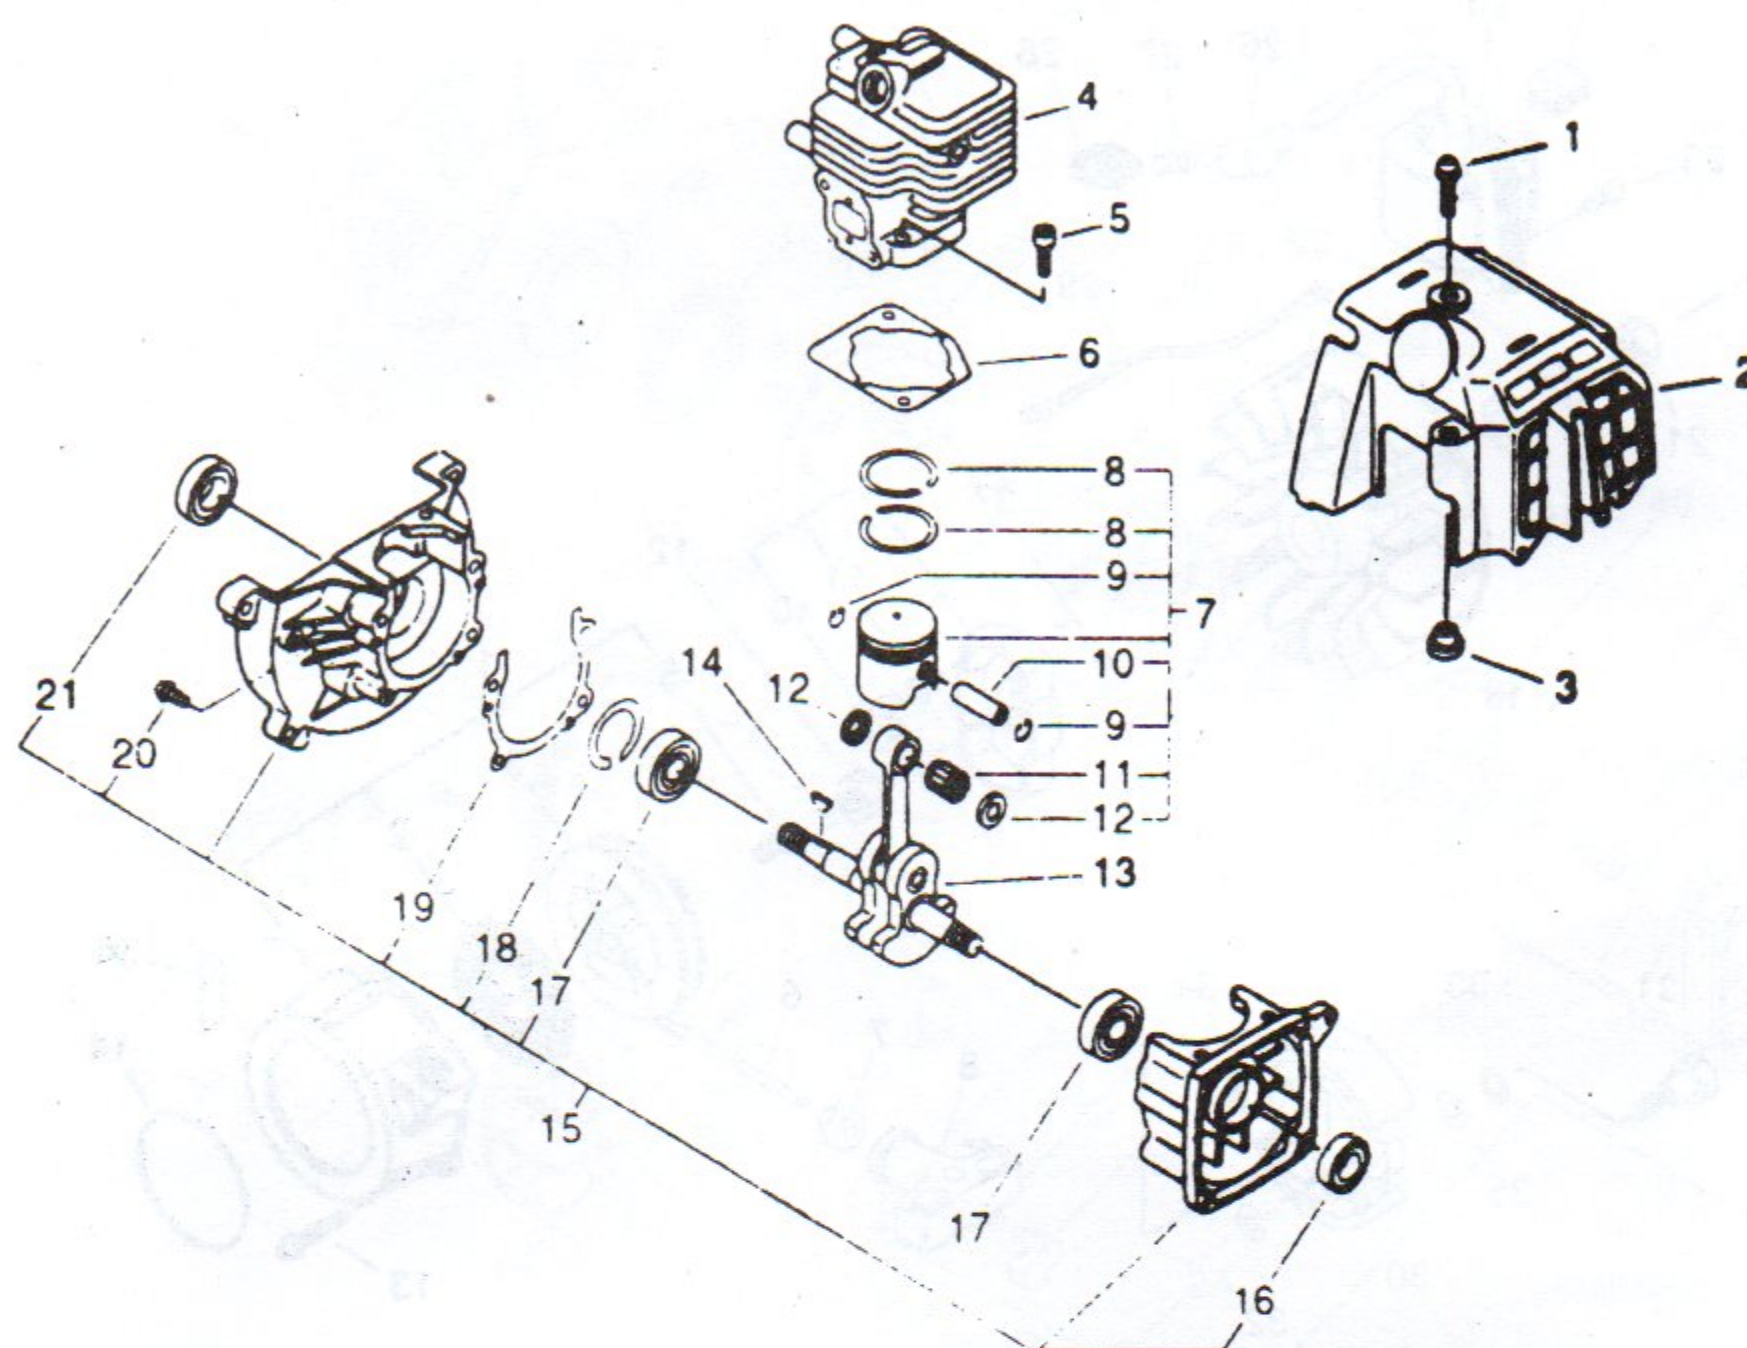


KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
1		900 242-0501 4	1	SCREW 5*14	
2		A160-000030	1	COVER,CYLINDER	
3		V353-000020	1	COLLAR 5	
4		101 011-6123 0	1	CYLINDER	
5		900 162-0502 2	2	BOLT H S. 5*22	
6		101 010-5593 0	1	GASKET,CYL BASE	
7		100 000-5593 2	1	PISTON KIT	
8	+	100 011-0533 0	2	RING, PISTON	
9	+	100 015-0463 0	2	CIRCLIP, PISTON PIN	
10	+	100 013-2233 0	1	PIN, PISTON	
11	+	V553-000020	1	BEARING, NEEDLE	
12	+	100 014-5593 0	2	SPACER, PISTON PIN	
13		100 100-5593 0	1	CRANKSHAFT ASY	
14		100 142-1233 0	1	KEY, WOODRUFF	
15		100 204-5703 1	1	CRANKCASE KIT	
16	+	100 213-0553 0	1	OILSEAL	
17	+	900 800-3600 1	2	BEARING, BALL 6001	
18	+	900 702-0002 8	1	CIRCLIP 28	
19	+	100 242-5593 0	1	GASKET, CRANKCASE	
20	+	900 242-0502 5	4	SCREW 5*25	
21	+	100 212-2823 0	1	OILSEAL ISCD 12*28*7	


SHP-800 2 Starter, Magneto

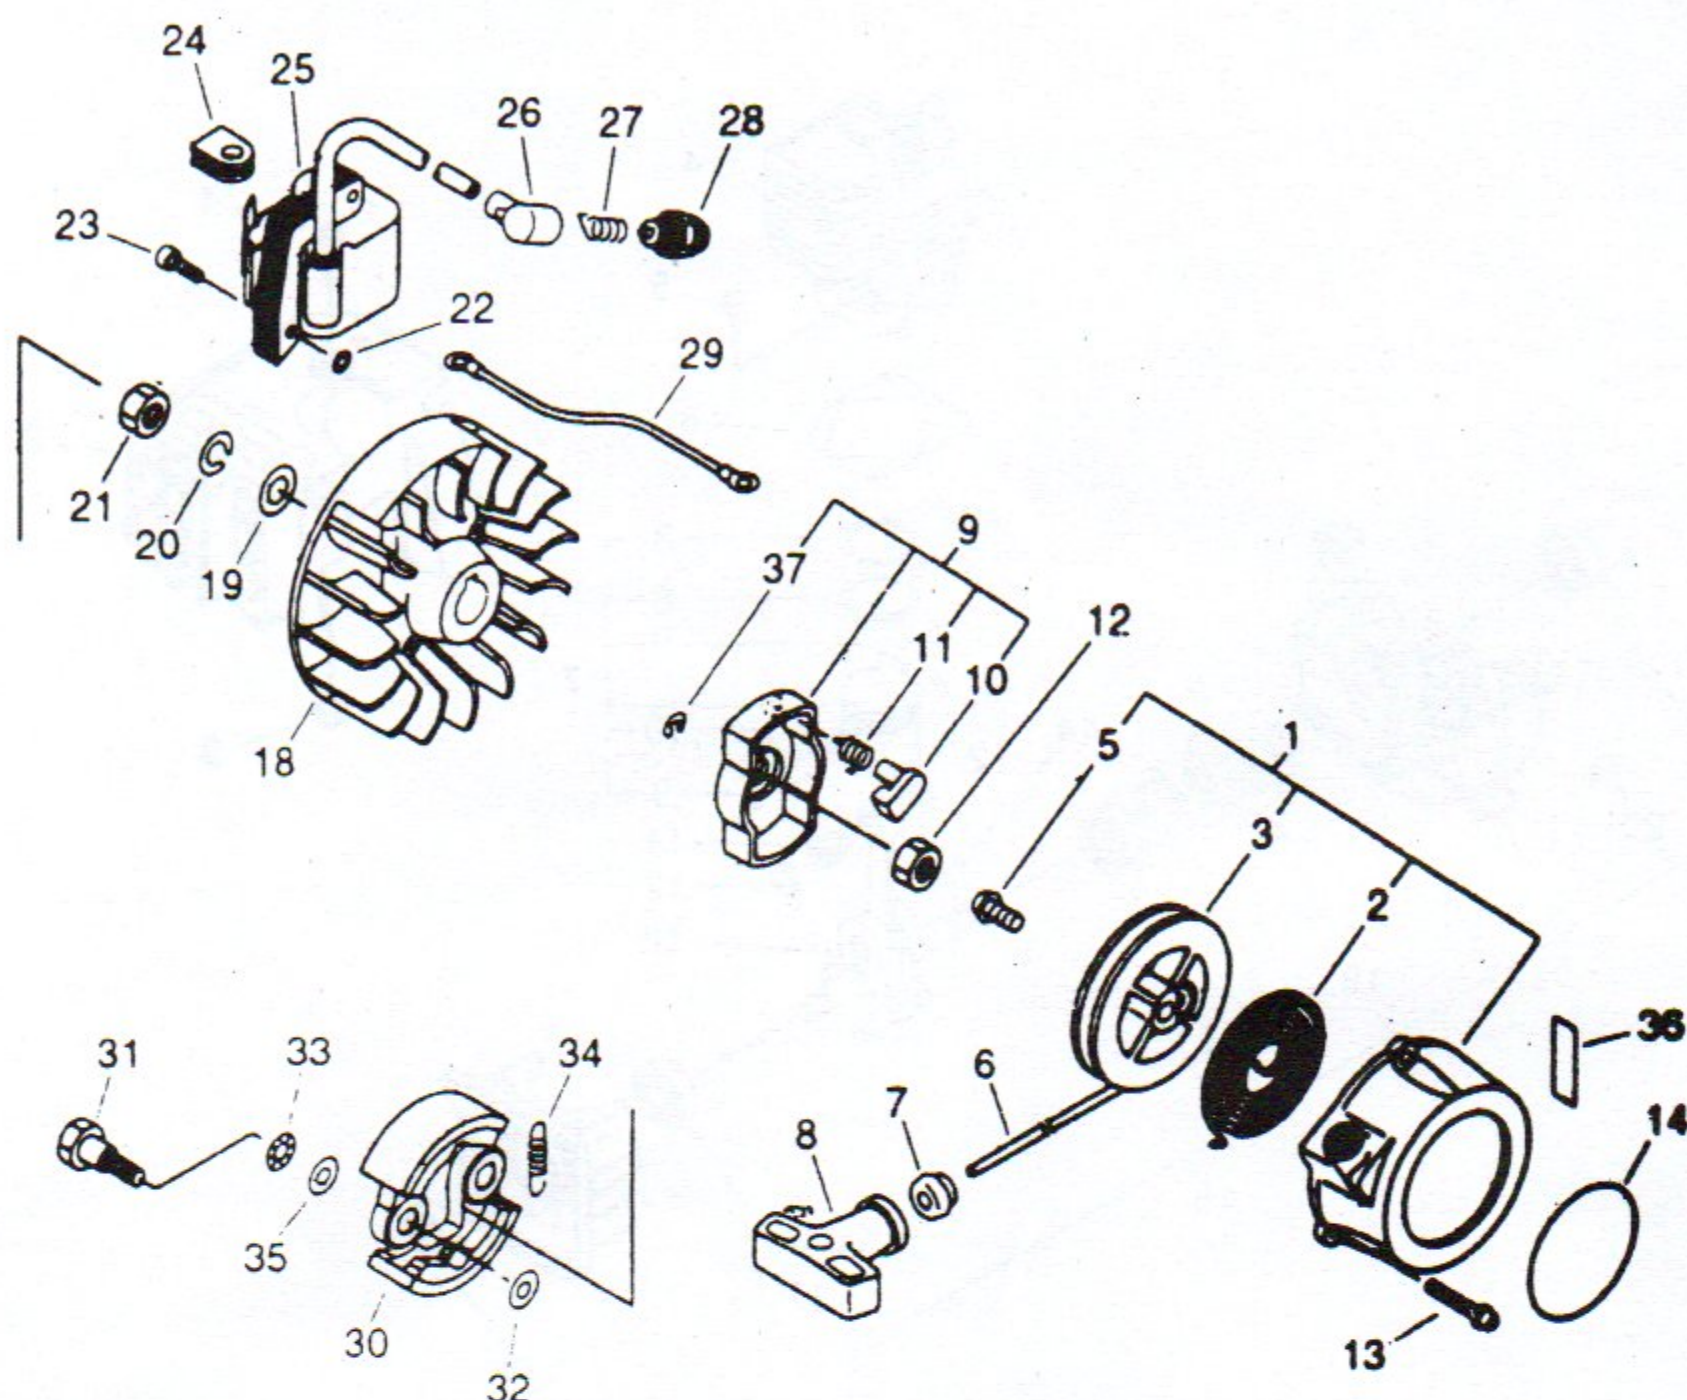

KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
1		177 200-5593 1	1	STARTER ASY	
2	+	177 220-4063 0	1	SPRING, REWIND	
3	+	177 215-4063 0	1	DRUM, STARTER	
5	+	177 236-4433 0	1	SCREW	
6	+	177 226-0393 0	1	ROPE, STARTER	
7	+	177 227-4203 0	1	GUIDE, ROPE	
8	+	177 228-2703 0	1	GRIP, STARTER	
9		177 202-4063 0	1	PAWL ASY, STARTER	
10	+	177 218-4063 0	1	PAWL, STARTER	
11	+	177 234-4063 0	1	SPRING, RETURN	
37	+	900 700-0000 4	1	E-RING 4	
12		900 502-0000 8	1	NUT 8 (3N)	
13		900 239-0401 4	4	SCREW 4*14	
14		890 053-5623 0	1	LABEL, KIORITZ 47MM	
18		152 801-5653 0	1	ROTOR, MAGNETO	
19		900 600-0000 8	1	WASHER 8	
20		900 605-0000 8	1	WASHER, SPRING 8	
21		900 502-0000 8	1	NUT 8 (3N)	
22		150 117-0913 0	2	SPACER	
23		900 162-0402 2	2	BOLT, H.S. 4*22	
24		156 112-2823 0	1	GROMMET	
25		152 626-5593 2	1	COIL, IGNITION	
26		159 012-0343 3	1	CAP, SPARK PLUG	
27		159 011-0343 2	1	COIL, SPARK PLUG CAP	

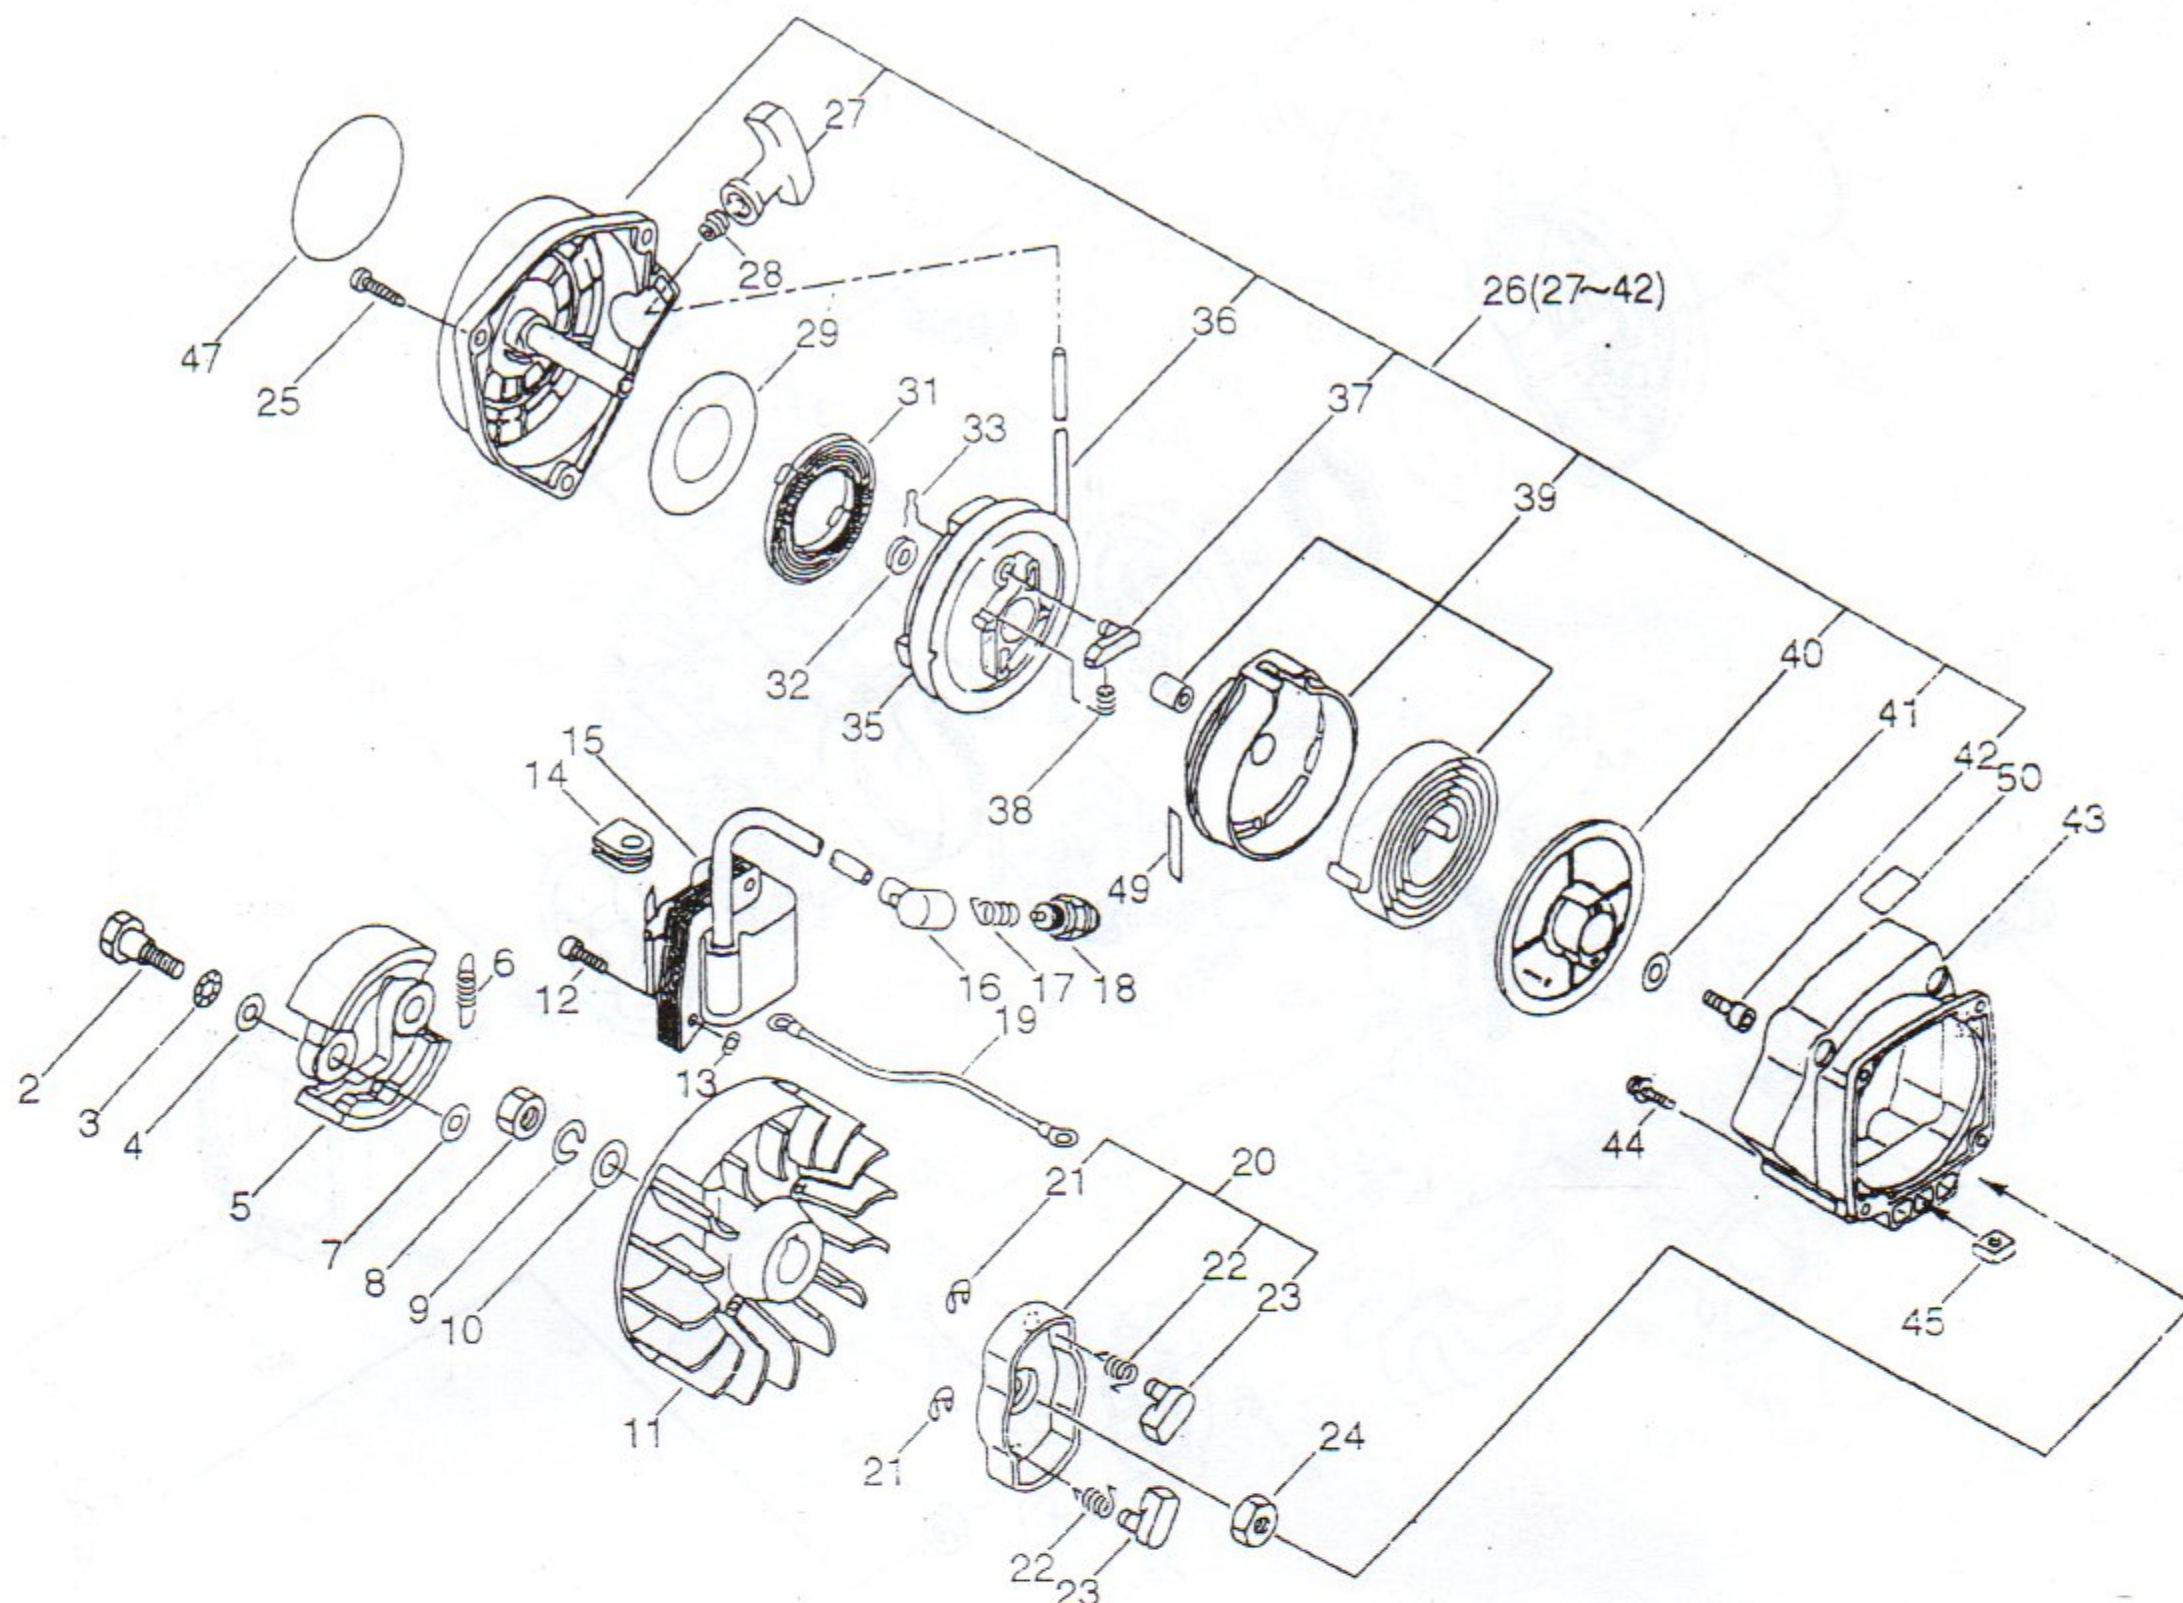


KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
2		175 046-5603 0	2	SHAFT, CLUTCH	
3		175 049-5603 0	2	WASHER	
4		V306-000020	2	WASHER, CIRCULAR 8	
5		175 009-5593 0	2	SHOE, CLUTCH	
6		V451-000040	1	SPRING, TENSION	
7		V304-000010	2	WASHER, CIRCULAR 6	
8		900 502-0000 8	1	NUT 8 (3N)	
9		900 605-0000 8	1	WASHER, SPRING 8	
10		900 600-0000 8	1	WASHER 8	
11		152 801-5653 0	1	ROTOR, MAGNETO	
12		900 162-0402 2	2	BOLT, H.S. 4*22	
13		150 117-0913 0	2	SPACER	
14		156 112-2823 0	1	GROMMET	
15		152 626-5593 2	1	COIL, IGNITION	
16		159 012-0343 3	1	CAP, SPARK PLUG	
17		159 011-0343 2	1	COIL, SPARK PLUG CAP	
18		159 010-1963 0	1	PLUG, SPARK (BPM-7Y)	
19		162 010-5543 0	1	LEAD	
20		A052-000030	1	PULLEY, ASM STARTER	
21	+	900 700-0000 4	2	E-RING 4	
22	+	177 234-4063 0	2	SPRING, RETURN	
23	+	177 218-4063 0	2	PAWL, STARTER	
24		900 502-0000 8	1	NUT 8 (3N)	
25		900 253-0502 0	3	SCREW 5*20	

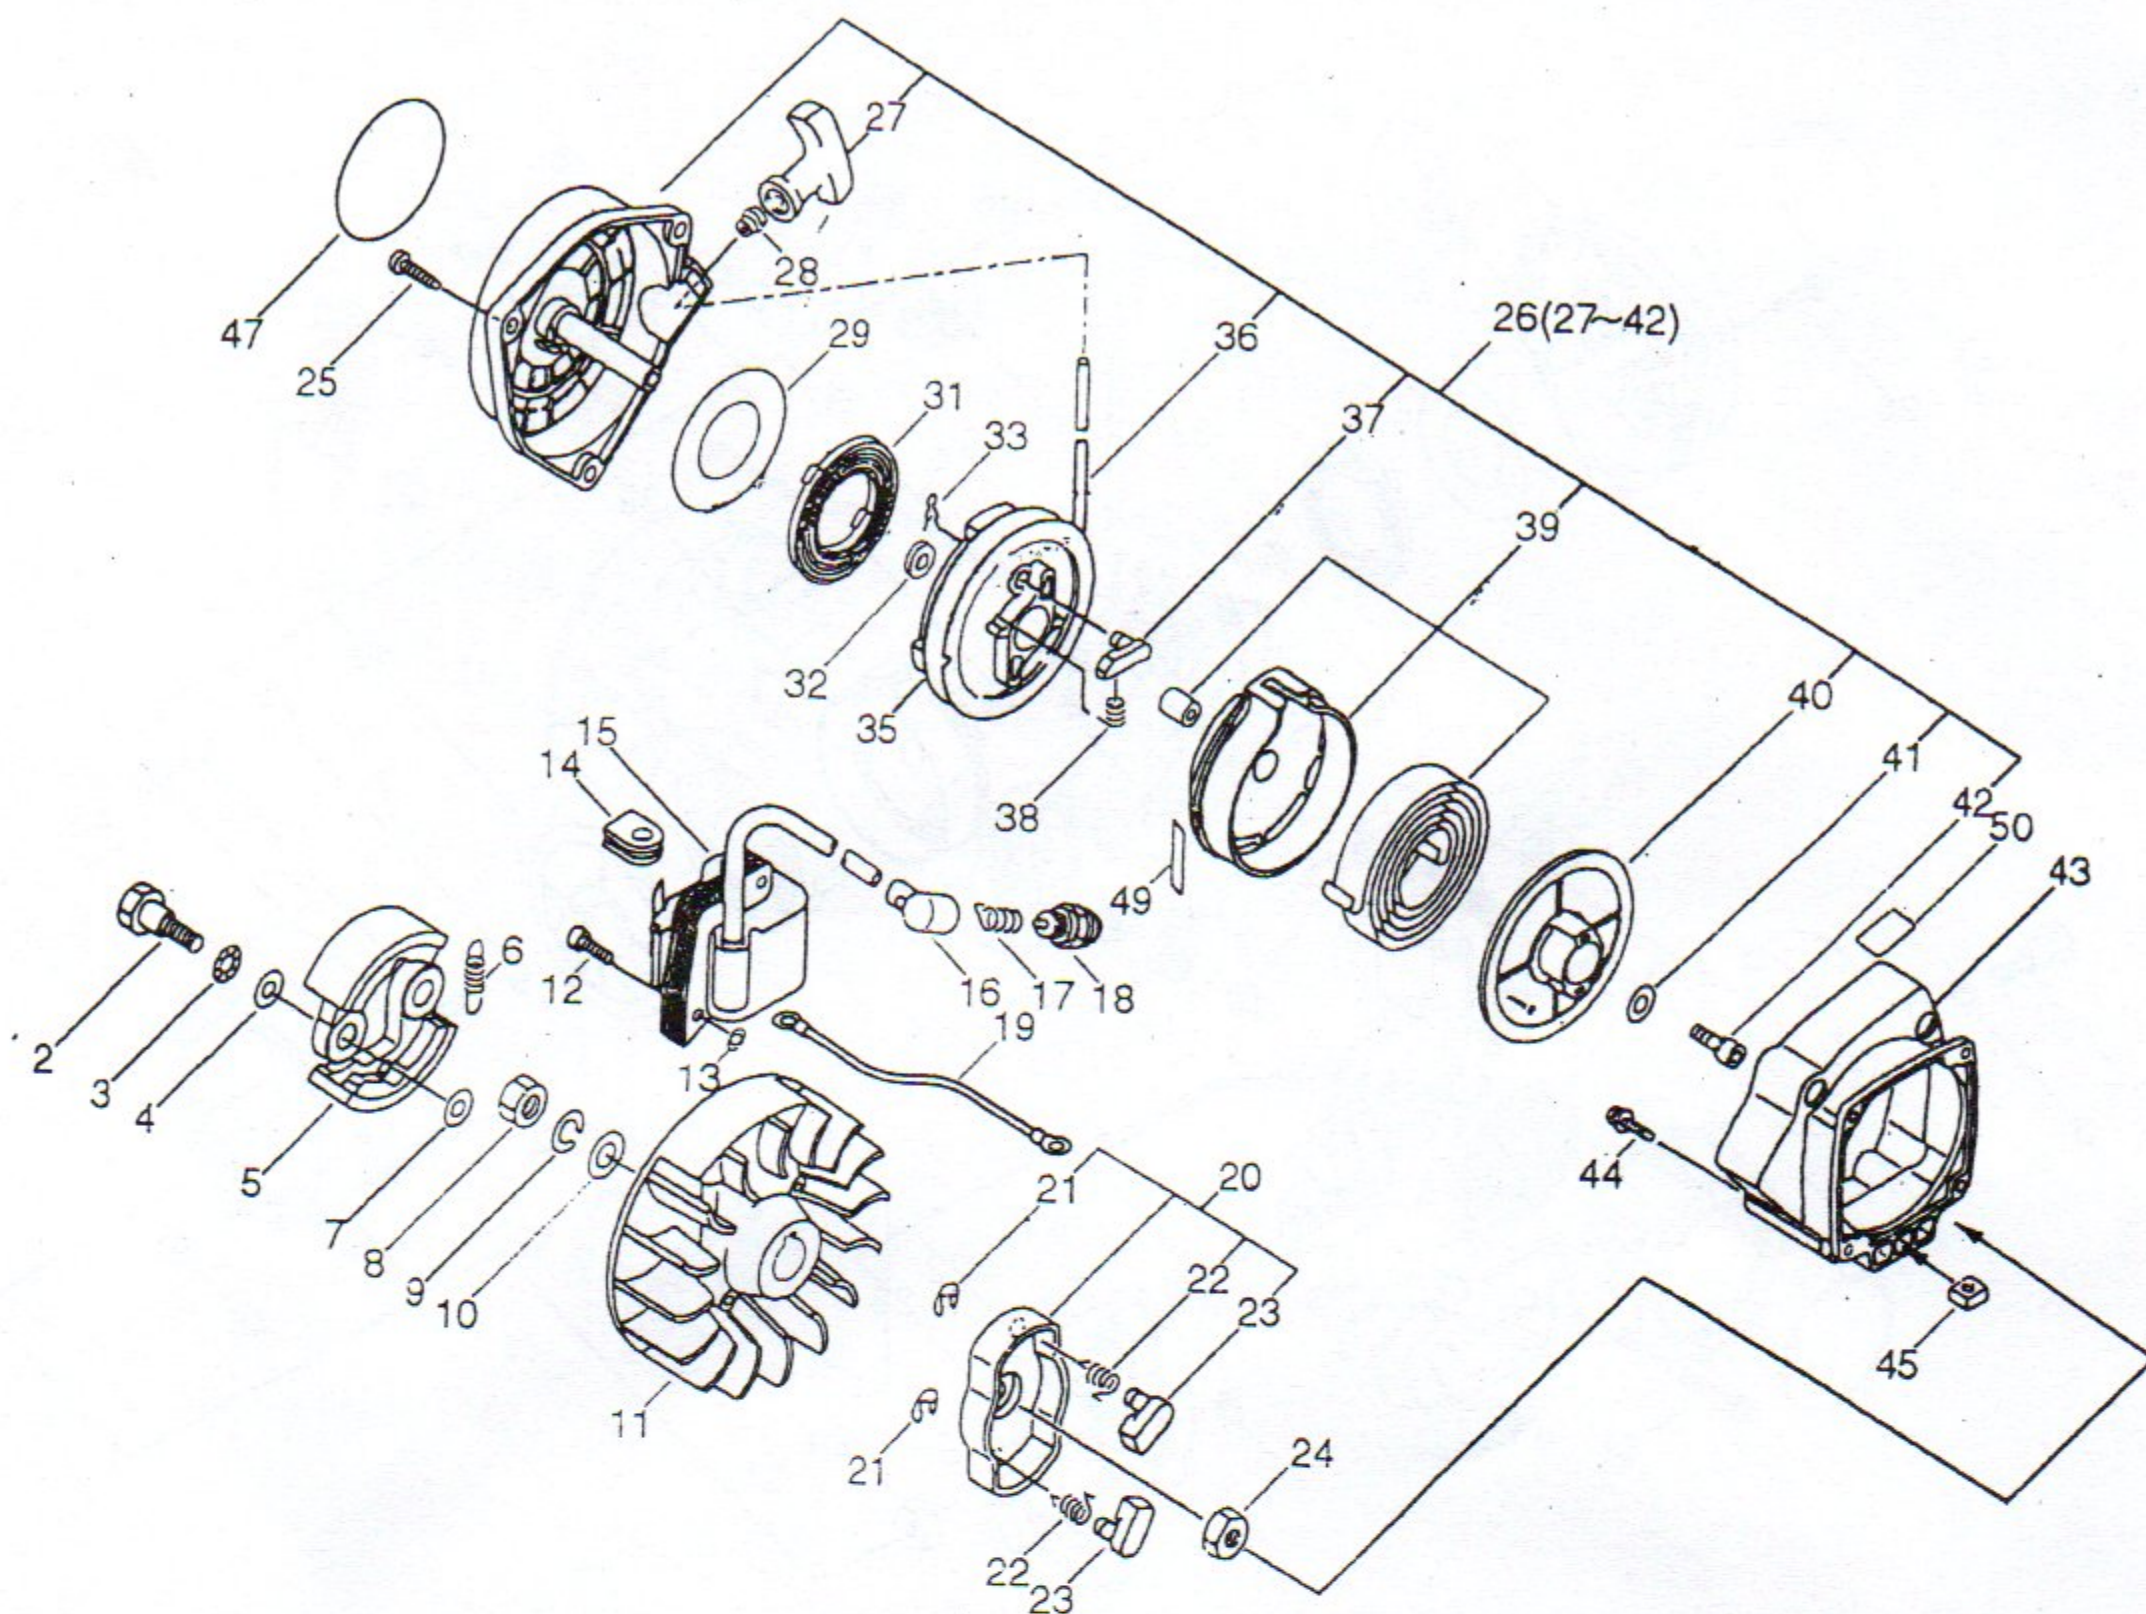


KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
26		A051-000113	1	STARTER, RECOIL	
27	+	177 228-2703 0	1	GRIP, STARTER	
28	+	177 227-4203 0	1	GUIDE, ROPE	
29	+	A503-000010	1	PLATE, STARTER	
31	+	A504-000000	1	SPRING, SPIRAL	
32	+	V355-000080	1	COLLAR, 8	
33	+	V641-000040	2	PIN, SNAP	
35	+	A506-000010	1	REEL, ROPE	
36	+	177 226-1012 0	1	ROPE, STARTER	
37	+	A514-000010	2	PAWL	
38	+	V450-000130	2	SPRING, COMPRESSION	
39	+	P021-002411	1	POWER SPRING ASY	
40	+	A520-000022	1	PULLEY, STARTING	
41	+	177 214-0283 0	1	WASHER	
42	+	900 105-0501 2	1	BOLT, H.S. 5*12	
43		V376-000190	1	SPACER	
44		900 162-0401 4	4	BOLT, H.S. 4*14	
45		900 565-0000 5	1	NUT	
47		X502-000030	1	LABEL, ECHO	
49		X505-000620	1	LABEL, CAUTION	
50		890 160-0636 1	1	LABEL, CAUTION	

SHP-800 2 Starter, Magneto

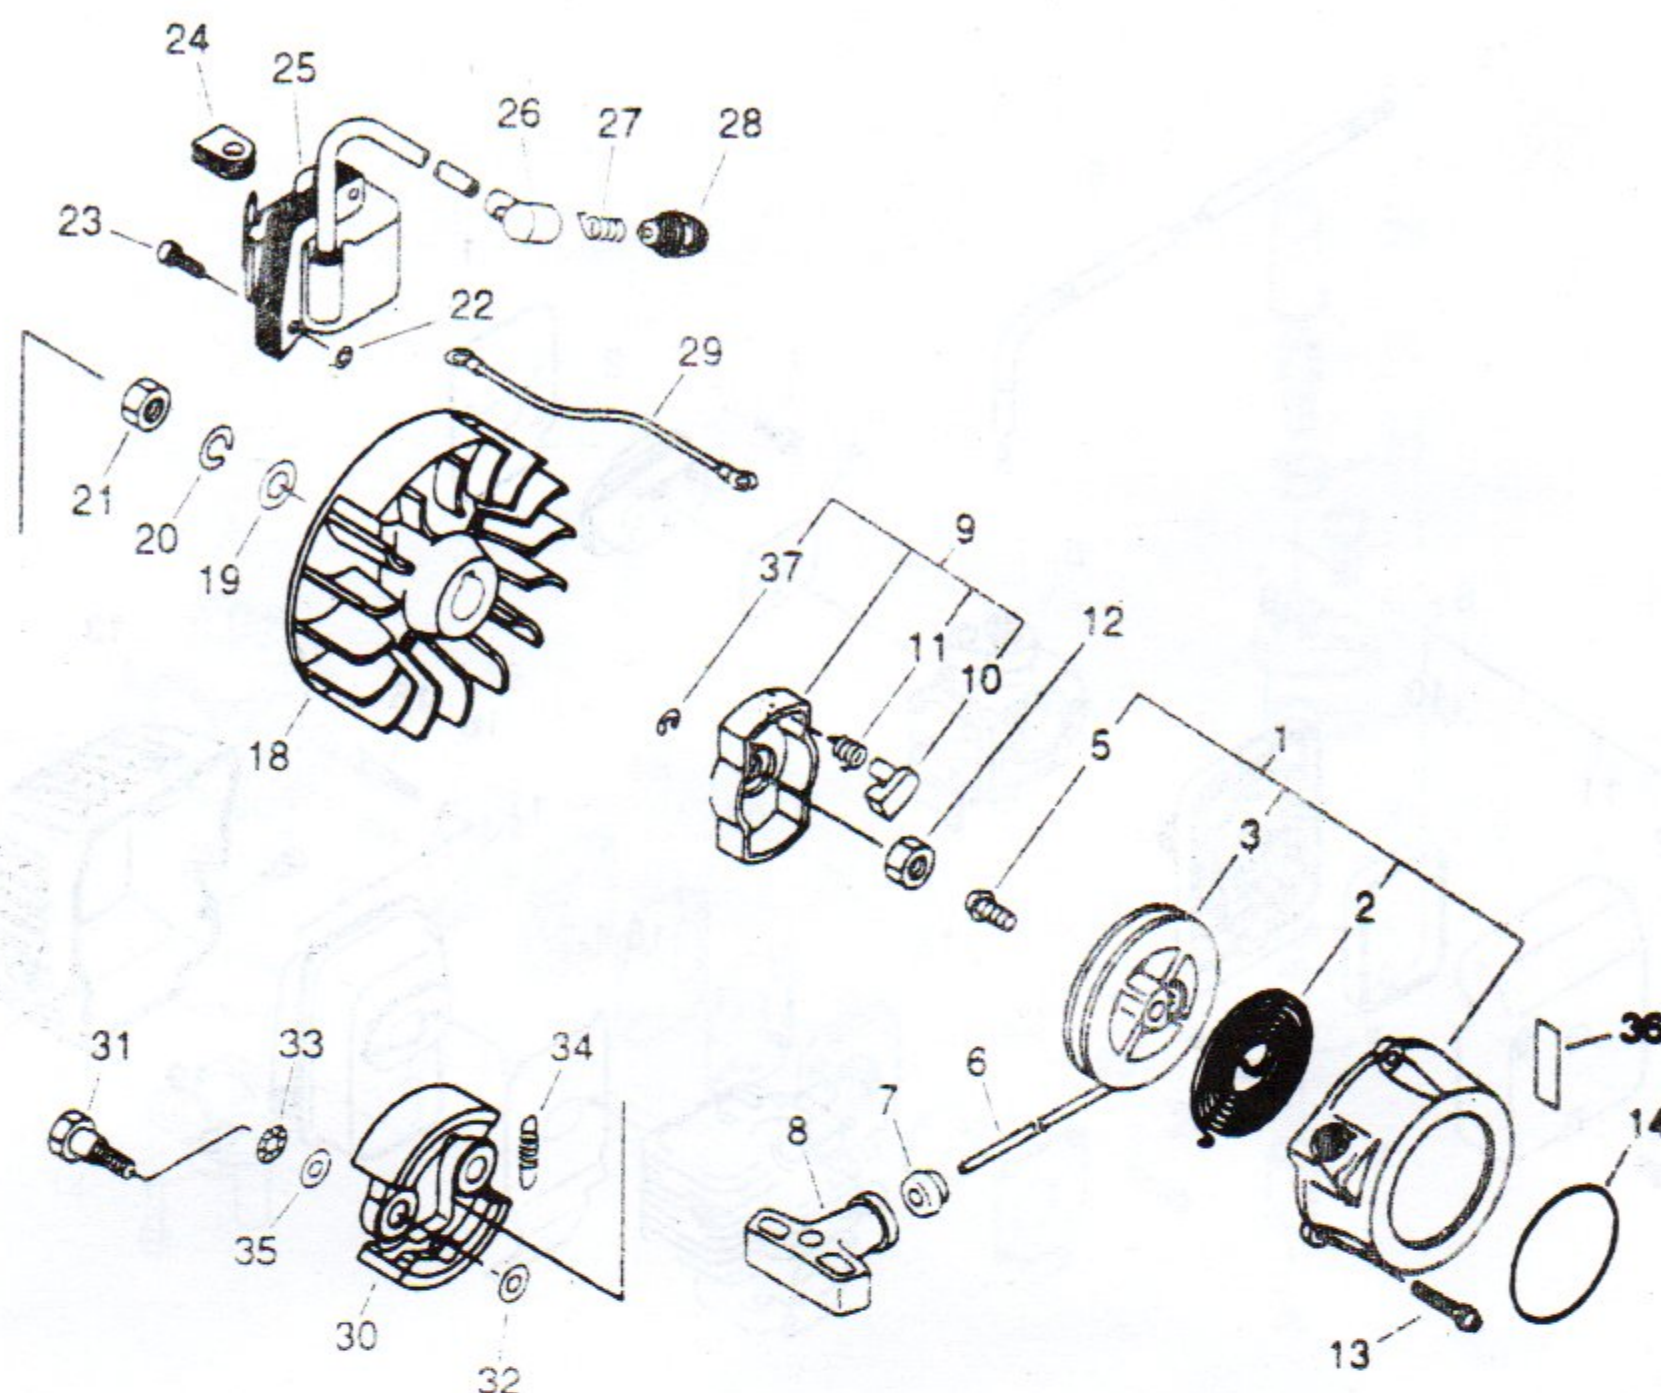


KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
28		159 010-1963 0	1	PLUG, SPARK (BPM-7Y)	
29		162 010-5543 0	1	LEAD	
30		175 009-5593 0	2	SHOE, CLUTCH	
31		175 046-5603 0	2	SHAFT, CLUTCH	
32		V304-000010	2	WASHER, CIRCULAR 6	
33		175 049-5603 0	2	WASHER	
34		V451-000040	1	SPRING, TENSION	
35		V306-000020	2	WASHER, CIRCULAR 8	
36		890160-06361	1	LABEL, CAUTION	

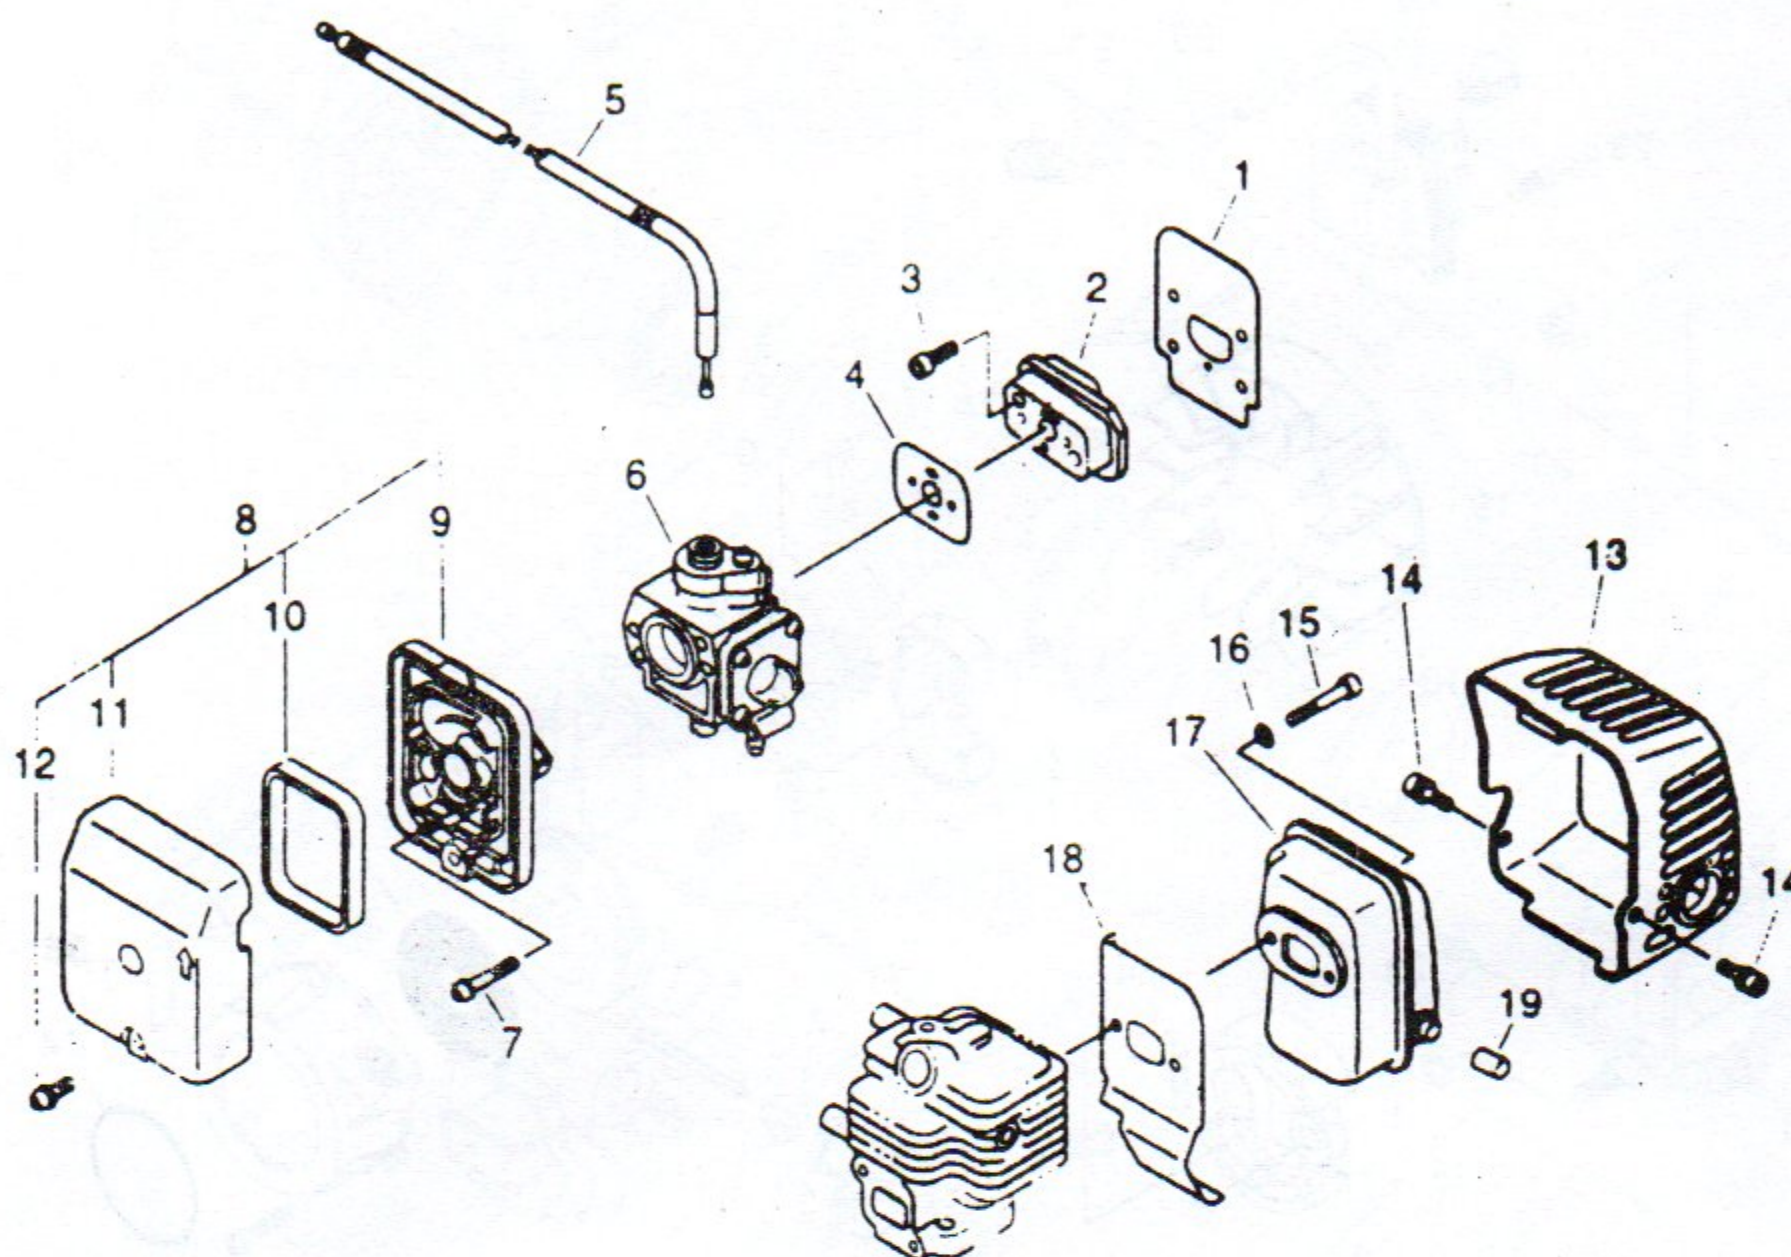


KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
1		130 010-5593 0	1	GASKET, INTAKE	
2		130 017-5643 1	1	INSULATOR	
3		900 162-0502 5	2	BOLT, H.S. 5*25	
4		130 010-5633 0	1	GASKET, INTAKE	
5		706 130-0523 0	1	WIRE THROTTLE	
6		124 200-1322 0	1	CARBURETOR	
7		900 242-0505 0	2	SCREW 5*50	
8		130 300-1341 1	1	CLEANER ASM. AIR	
9	+	130 307-1341 0	1	CASE, AIR CLEANER	
10	+	130 310-1341 0	1	FILTER, AIR	
11	+	130 308-1341 0	1	COVER, AIR CLEANER	
12	+	900 238-0501 6	1	SCREW 5*16	
13		145 621-5653 0	1	COVER, MUFFLER	
14		900 106-0500 8	2	BOLT, H.S. 5*8	
15		900 105-0505 5	2	BOLT, H.S. 5*55	
16		900 600-0000 5	2	WASHER 5	
17		145 610-6263 0	1	MUFFLER	
18		145 510-5593 1	1	GASKET, MUFFLER	
19		G231-000021	1	PIPE, EXHAUST	

SHP-800 4 Carburetor

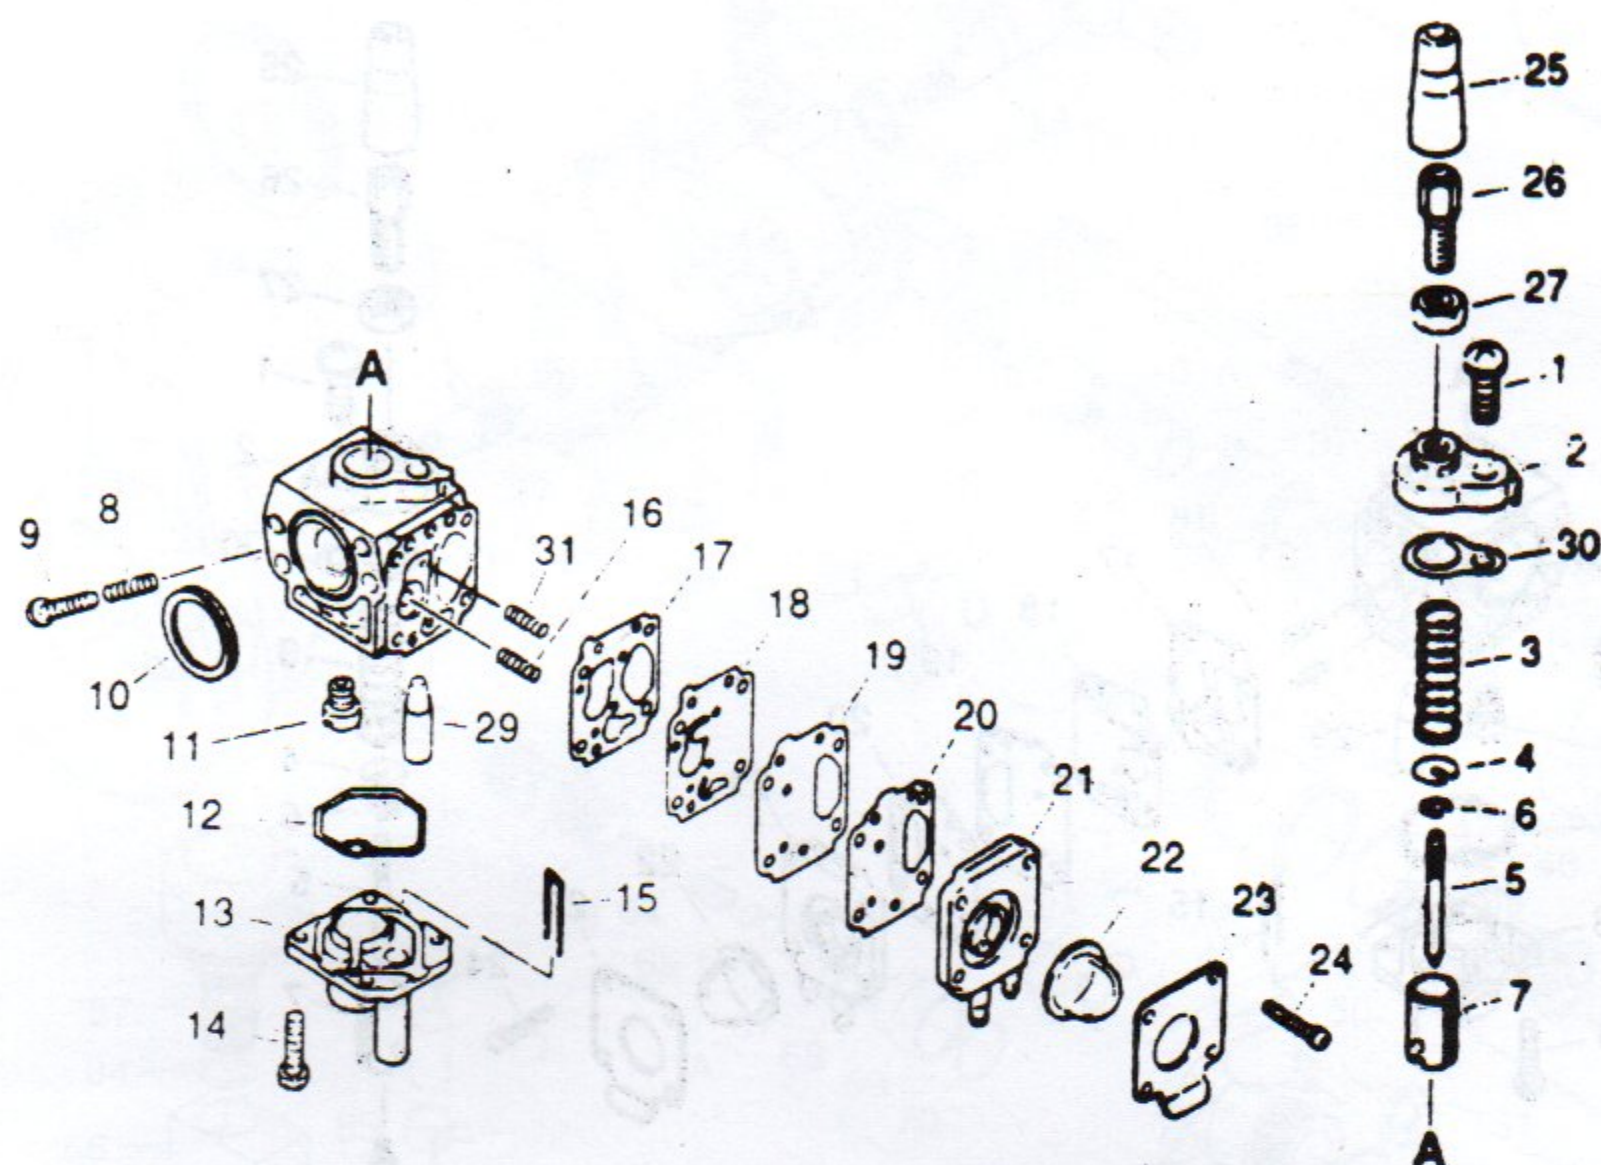


KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
		124 200-1322 0	1	CARBURETOR	
1	+	900 241-0501 6	1	SCREW 5*16 (W/W.SW)	
2	+	124 113-1341 0	1	COVER TOP	
3	+	124 114-0553 0	1	SPRING THROTTLE	
4	+	124 115-0553 0	1	SEAT SPRING	
5	+	124 317-4993 0	1	NEEDLE JET	
6	+	124 116-0553 0	1	E-RING	
7	+	124 318-5423 0	1	VALVE THROTTLE	
8	+	124 160-1112 0	1	SPRING IDLE ADJUST	
9	+	124 129-1341 0	1	SCREW	
10	+	124 149-1341 0	1	GASKET FRANGE	
11	+	124 122-1401 0	1	JET MAIN #50	
12	+	124 123-1341 0	1	GASKET CHAMBER	
13	+	124 124-1341 0	1	CHAMBER FLOAT	
14	+	900 241-0301 0	4	SCREW 3*10 (W/SW)	
15	+	124 182-1341 0	1	WIRE DRAIN	
16	+	124 355-5013 0	1	SPRING ADJUSTMENT	
17	+	124 361-1271 0	1	GASKET	
18	+	124 364-1271 0	1	DIAPHRAGM FUEL PUMP	
19	+	124 362-1271 0	1	BODY FUEL PUMP	
20	+	124 363-1271 0	1	GASKET FUEL PUMP	
21	+	124 365-1341 0	1	COVER PUMP	
22	+	124 380-1271 0	1	PUMP PRIMING	
23	+	124 342-1271 0	1	PLATE PUMP	

8HP-800 4 Carburetor

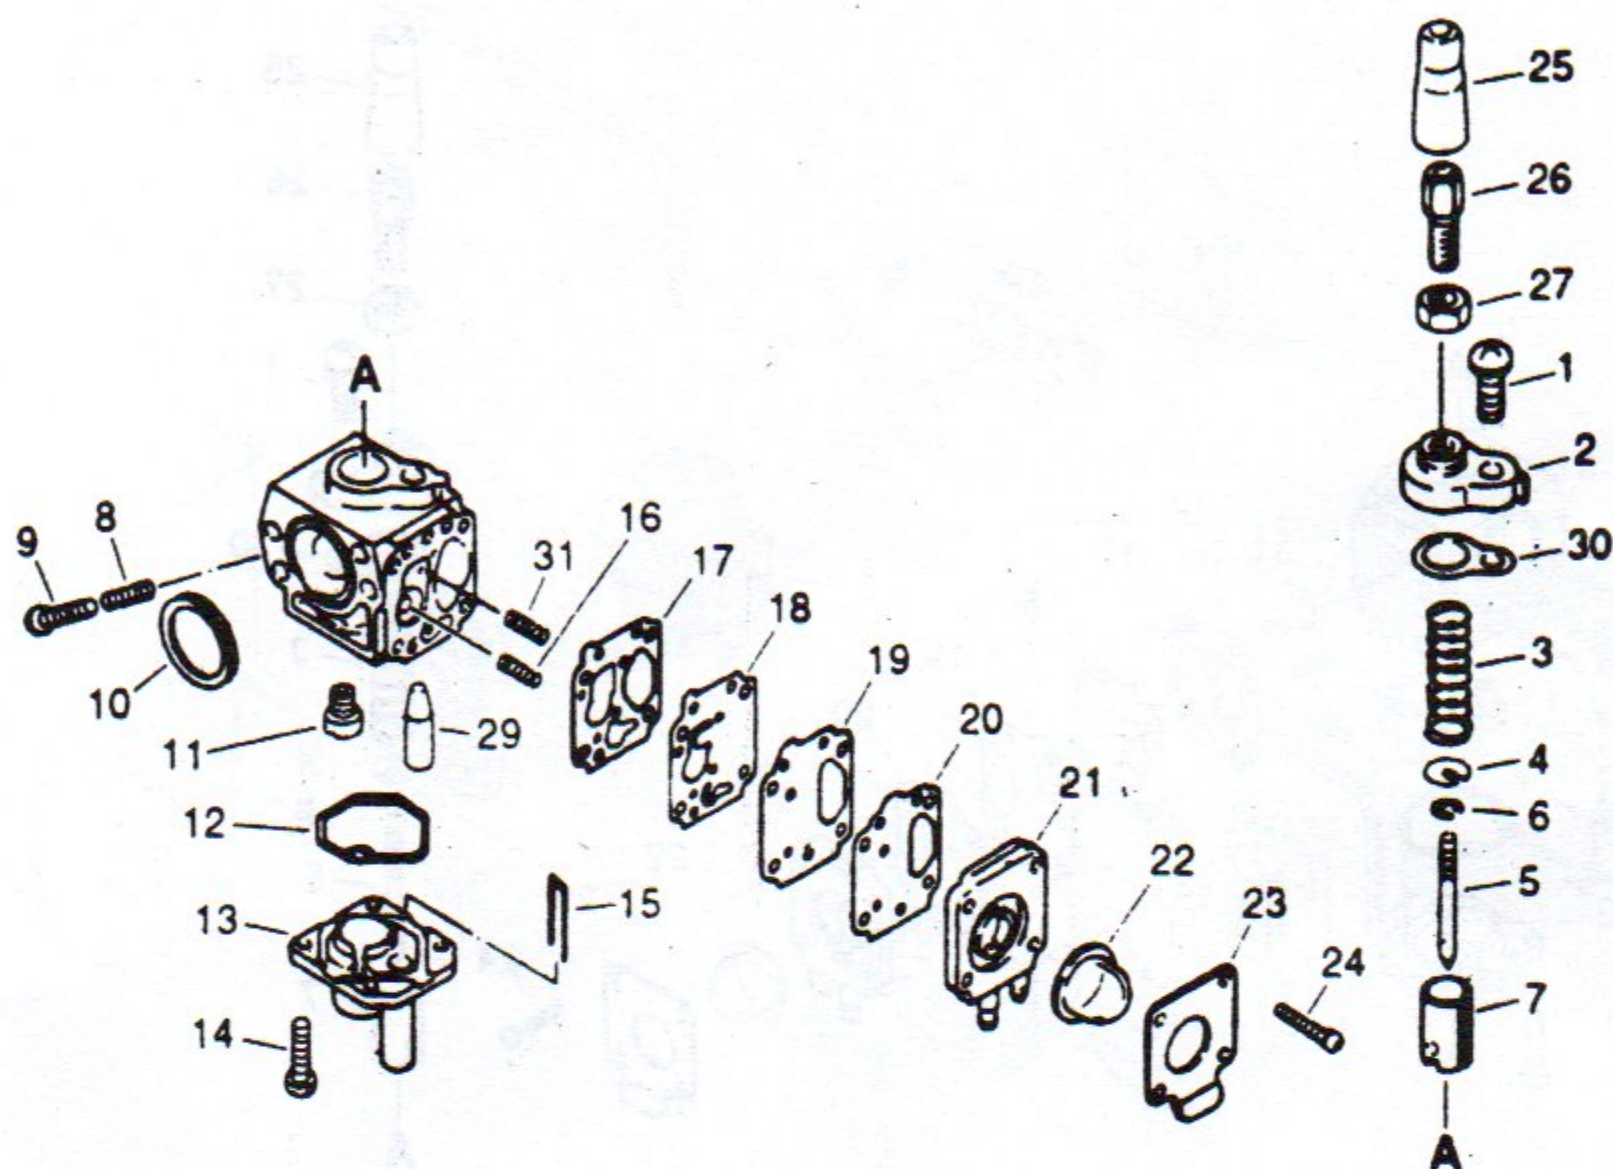


KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
24	+	900-241-0301 4	4	SCREW 3*14 (W/SW)	
25	+	124-174-1341 0	1	CAP, RUBBER	
26	+	124-158-1341 0	1	ADJUST, CABLE	
27	+	124-111-0581 0	1	NUT	
29	+	124-162-1341 0	1	JET, NEEDLE	
30	+	124-172-1341 0	1	PACKING	
31	+	124-367-5423 0	1	SPRING, BACK UP	

SHP-800 5 Pressure Pump Single Nozzle Type

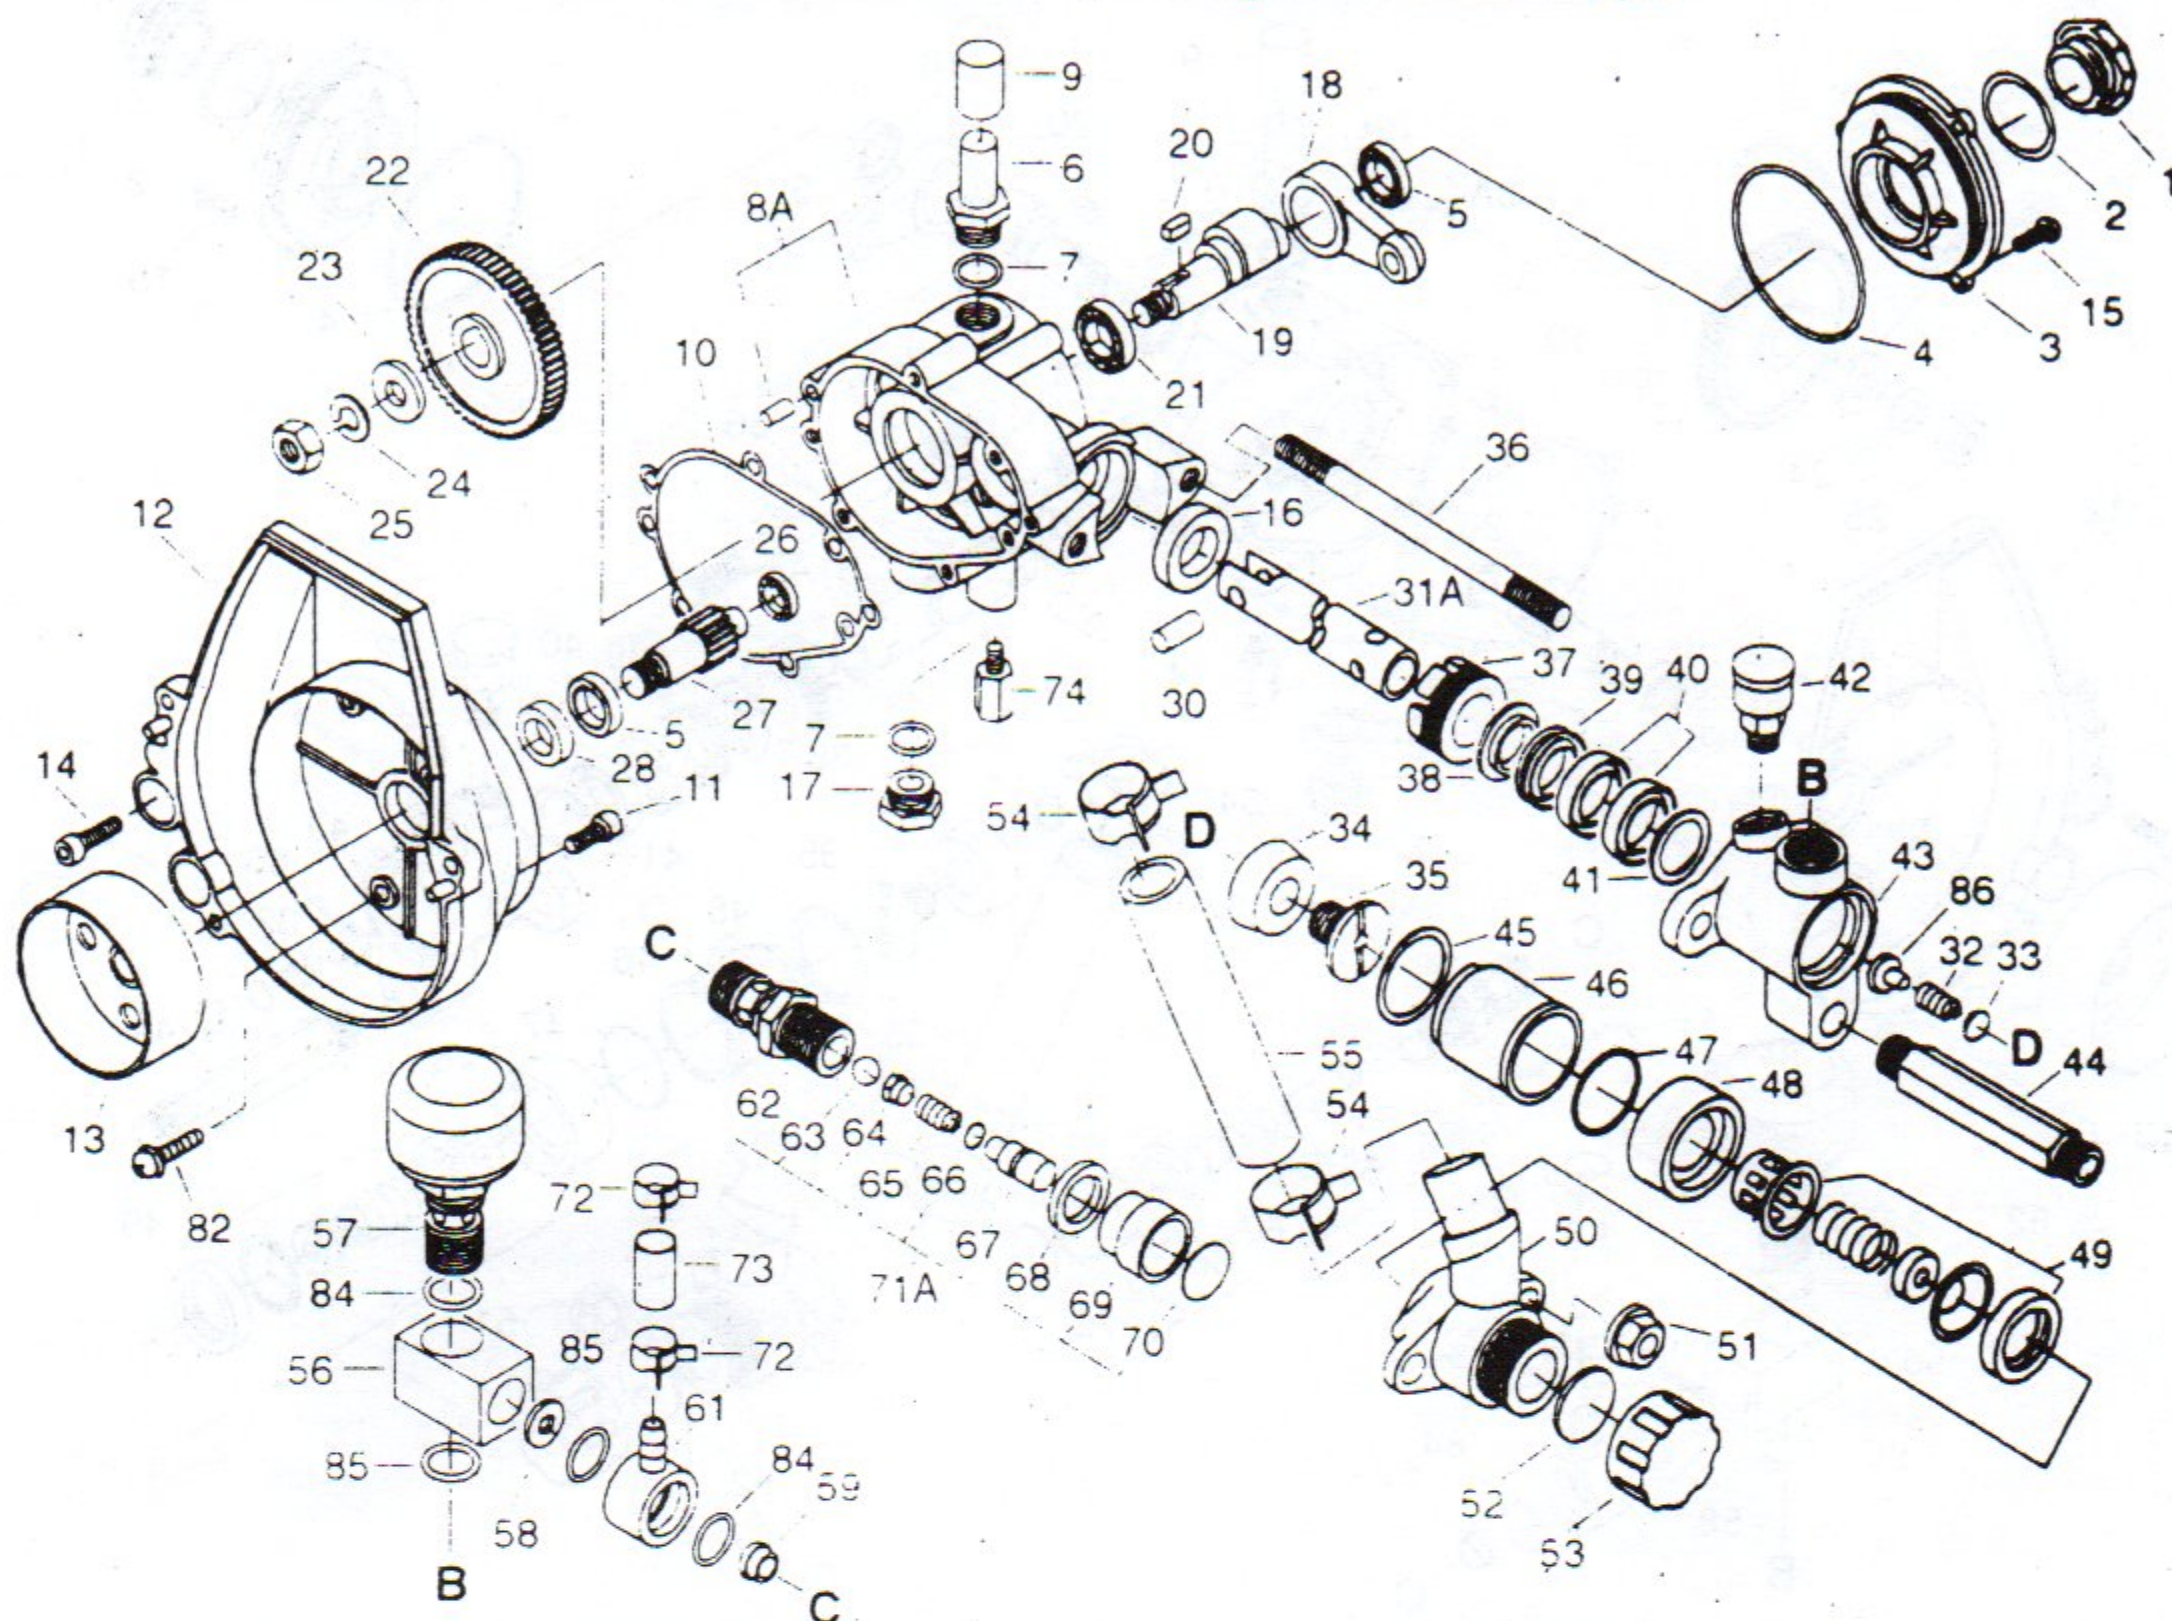


KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
1		706 150-0195 1	1	OIL MIRROR	
2		706 150-0278 1	1	O-RING	
3		706 020-0374 1	1	PUMP COVER	
4		706 020-0497 0	1	O-RING	
5		900 800-0600 1	2	BEARING, BALL 6001	BB6001
6		706 020-0692 0	1	OILING BOLT	
7		900 722-0010 0	2	O-RING	
8A		706 020-08A4 3	1	PUMP BODY W/PIN	
9		706 020-0997 0	1	GROMMET	
10		706 020-1070 0	1	PACKING	
11		900 162-0501 8	4	BOLT, H.S. 5*18	
12		706 020-1224 1	1	ENGINE COVER	
13		706 020-1325 0	1	CLUTCH DRUM	
14		900 162-0502 5	2	BOLT, H.S. 5*25	
15		900 242-0401 2	3	SCREW 4*12	
16		706 020-1697 0	1	OIL SEAL	26*11.7
17		706 020-1792 0	1	SCREW	
18		706 020-1822 0	1	CONNECTING ROD	
19		706 020-1923 0	1	CRANKSHAFT	
20		706 020-2003 0	1	KEY	
21		900 810-0620 1	1	BEARING 6201	
22		706 020-2223 1	1	REDUCTION GEAR	
23		900 600-0000 8	1	WASHER 8	
24		900 605-0000 8	1	WASHER, SPRING 8	

SHP-800 5 Pressure Pump Single Nozzle Type

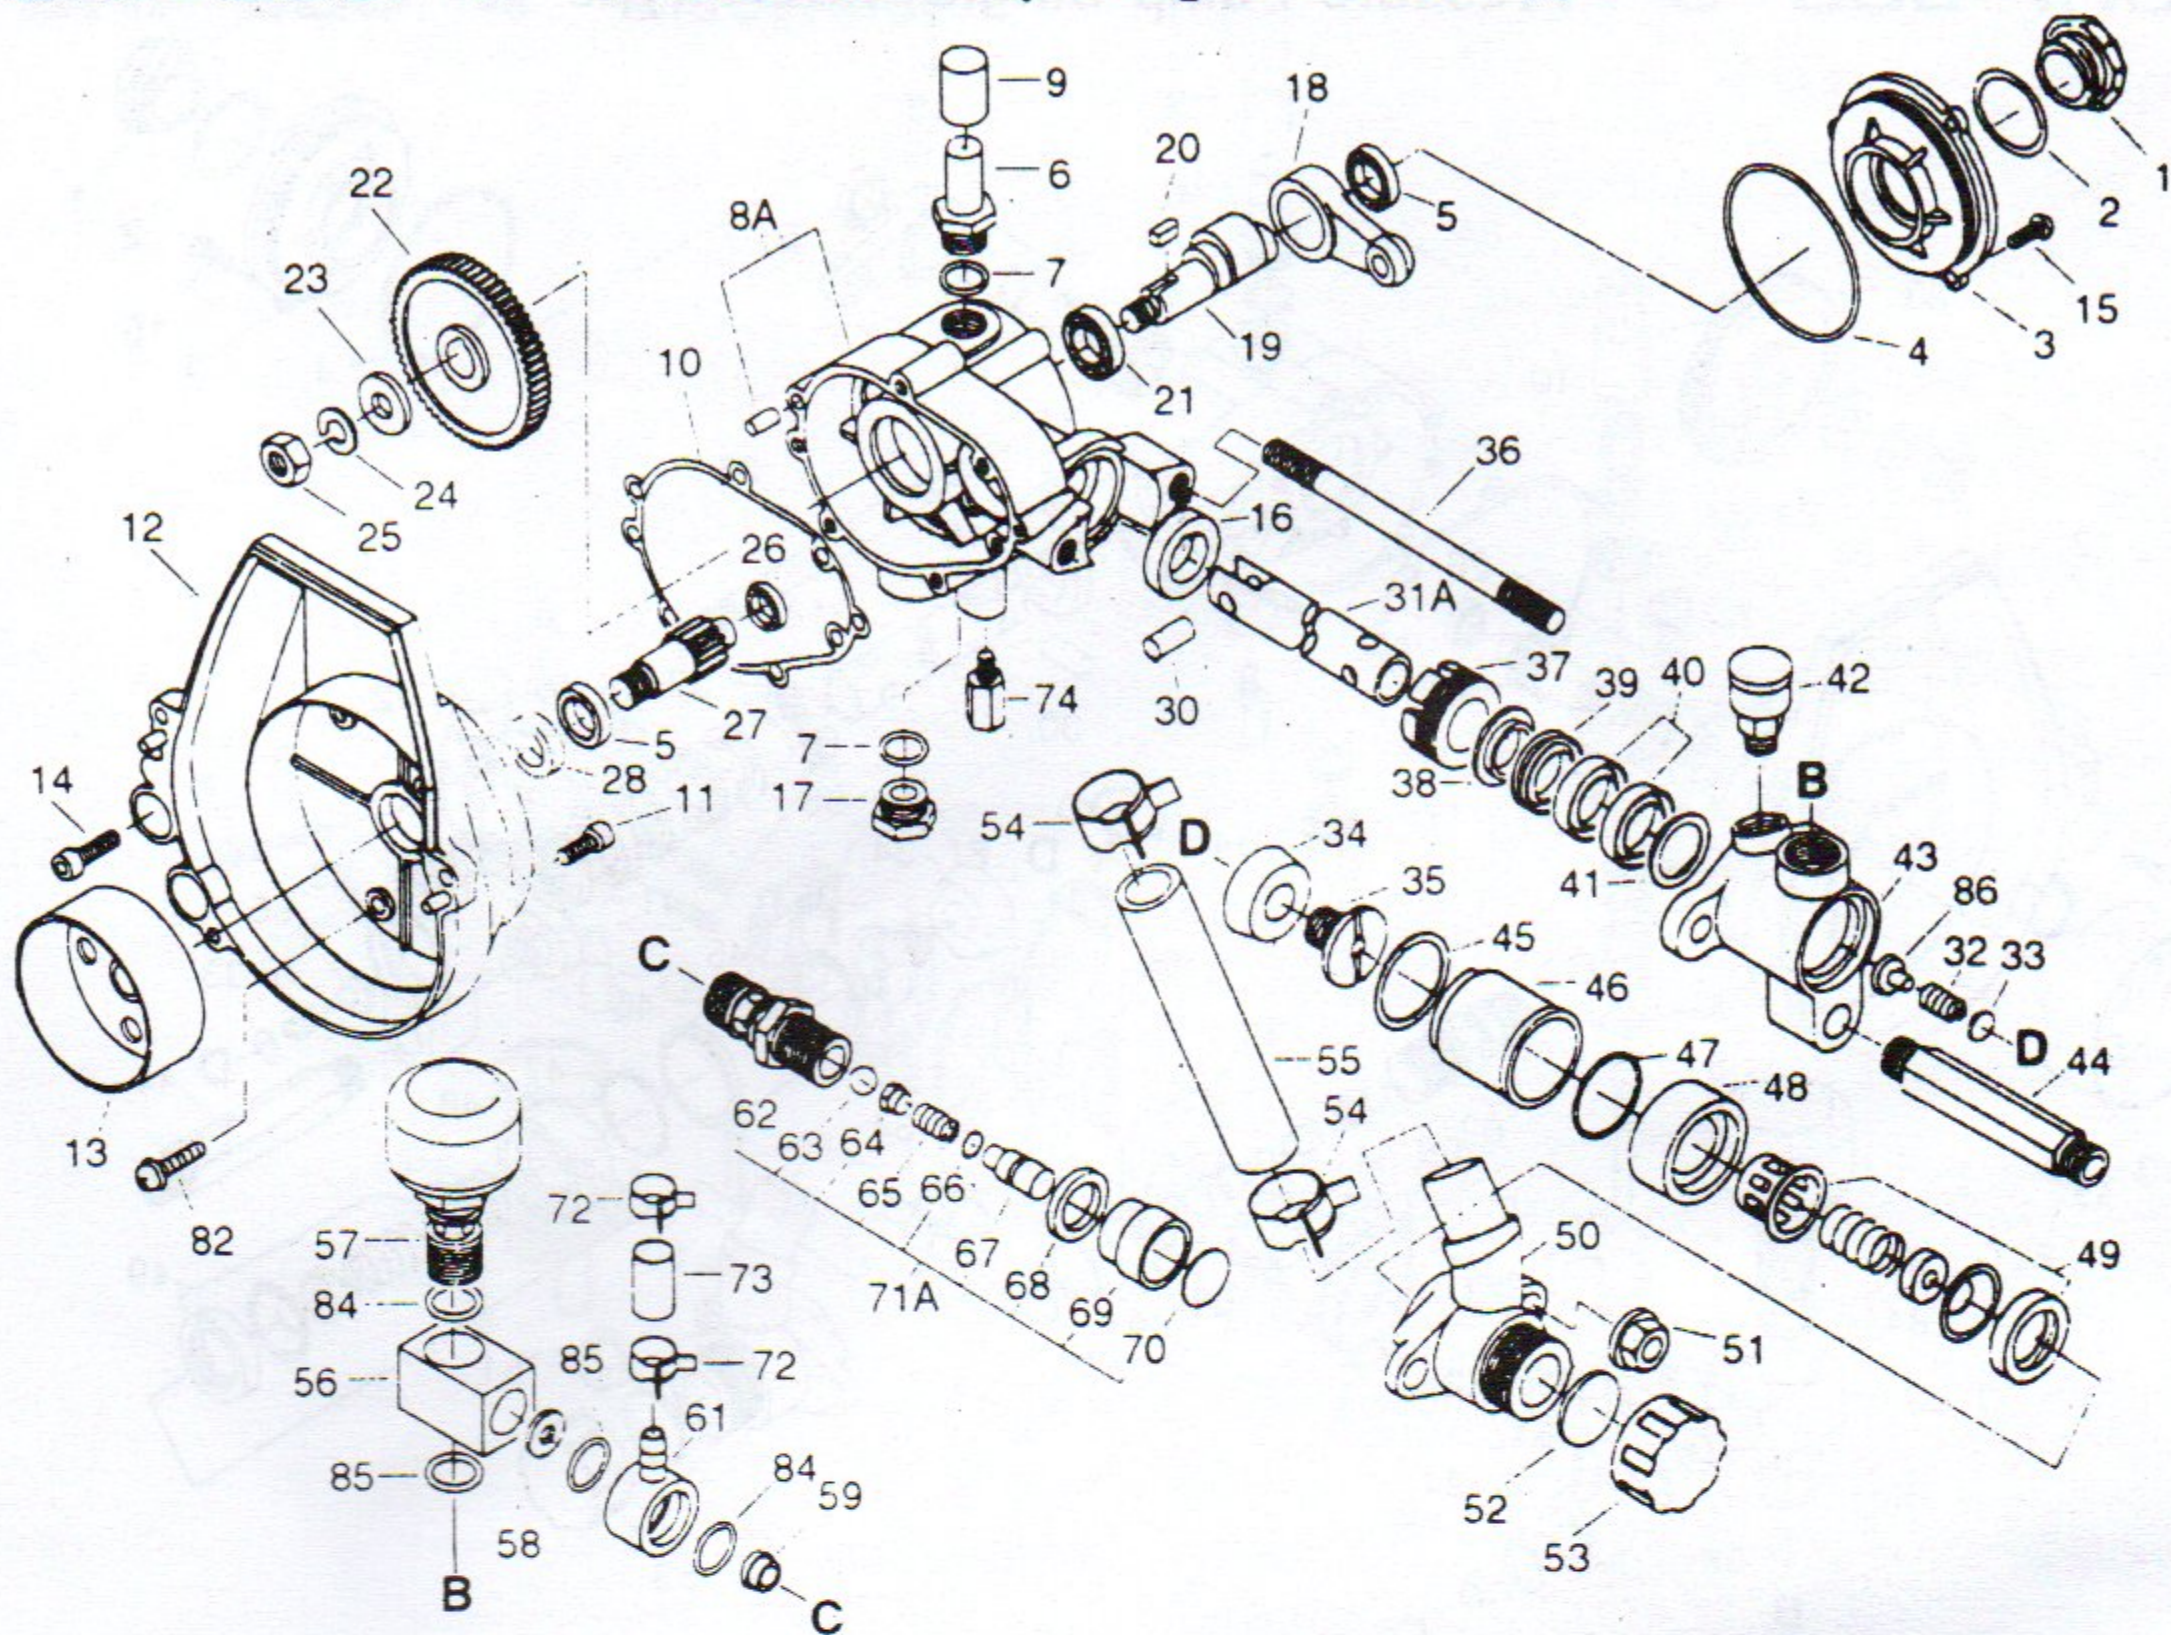


KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
25		706 020-2595 0	1	NUT	
26		900 800-0060 9	1	BEARING, BALL 609	
27		706 020-2723 0	1	PINION SHAFT	
28		706 020-2897 0	1	OIL SEAL	
30		706 020-3023 0	1	PISTON PIN	
31A		706 020-31A1 3	1	PLUNGER W/SPRINGSEAT	
86	+	706 150-8606 0	1	SPRING SEAT	
32		706 020-3201 0	1	SPRING PLATE	
33		706 020-3371 0	1	PLATE	
34		706 020-3477 0	1	HARD RUBBER	
35		706 020-3591 1	1	BOLT PLUNGER	
36		706 020-3695 1	2	SCEW	
37		706 020-3762 0	1	NUT GLAND	
38		706 020-3872 0	1	L-PACKING	
39		706 020-3972 0	1	GREASE PACKING	
40		706 020-4077 1	1	V-PACKING ASY	
41		706 020-4172 0	1	V-PACKING	
42		706 020-4204 0	1	CUP-GREASE ASY	
43		706 020-4342 1	1	CYLINDER	
44		706 020-4502 2	1	JOINT	
45		706 020-4678 0	1	PACKING	
46		706 020-4741 2	1	SLEEVE	
47		706 020-4897 0	1	O-RING	
48		706 020-4982 1	1	VALVE PLUNGER	

SHP-800 5 Pressure Pump Single Nozzle Type

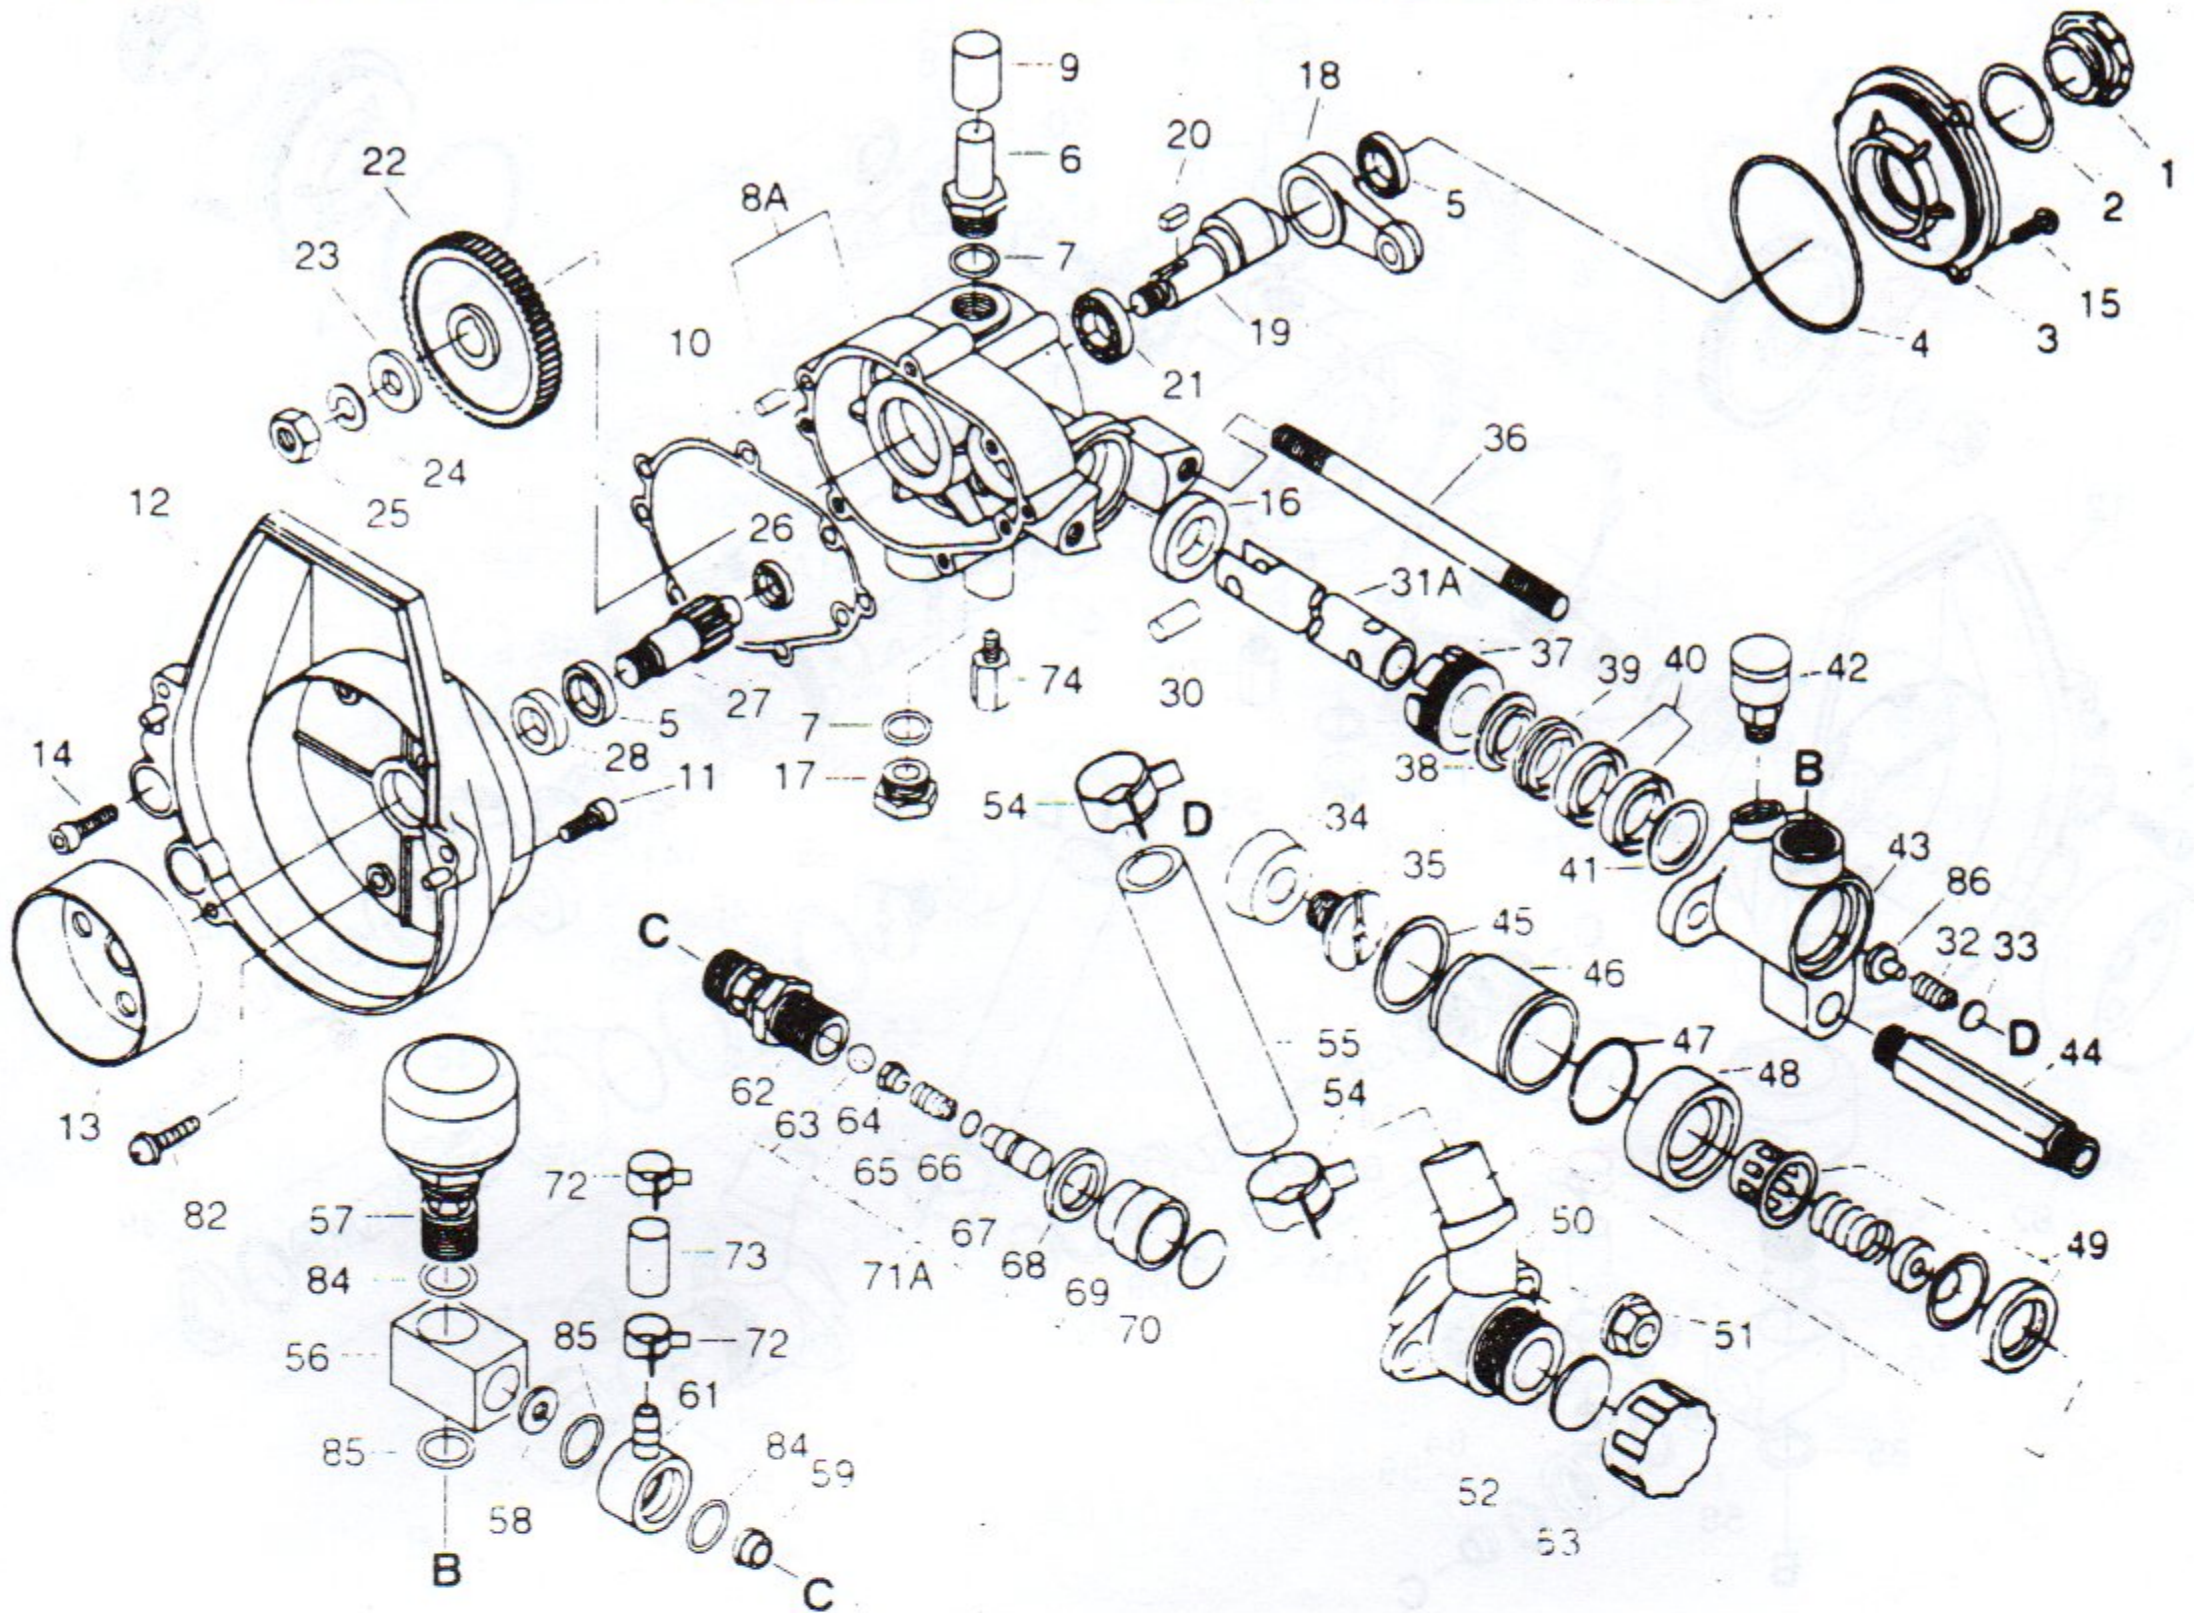


KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
49		706 020-5000 0	1	VALVE ASY.PLUNGER	
50		706 150-5052 0	1	INTAKE PIPE	
51		706 020-5295 0	2	NUT	
52		250 210-1161 0	1	GASKET DRAIN	
53		250 211-1161 0	1	CAP. DRAIN	
54		706 150-5493 0	2	BAND D21	
55		706 150-5577 0	1	INLET HOSE	15*21*L90
56		706 020-5562 1	1	CONNECT.REGULATOR	
57		706 020-5641 1	1	AIR CHAMBER	
71A		706 020-60A2 1	1	REGULATOR ASY	
58	+	706 020-6176 0	1	WASHER	
59	+	706 020-6201 2	1	PACKING	
61	+	706 020-6462 0	1	OUTLET CONNECTOR	
62	+	706 020-6562 1	1	OUTLET	
63	+	706 020-6601 1	1	PRESSURE STEEL BALL	
64	+	706 020-6782 0	1	SPRING SEAT	
65	+	706 020-6801 0	1	PRESSURE SPRING	
66	+	900 720-0000 7	1	O-RING 7	
67	+	706 020-7062 0	1	REGULATOR SHAFT	
68	+	706 020-7192 0	1	FIXED NUT	
69	+	706 020-7292 0	1	REGULATOR NUT	
70	+	706 020-7309 1	1	REGULATOR DECAL	
84	+	900 720-0125 0	2	O-RING 12.5	
85	+	900 720-0001 6	2	O-RING 16	

SHP-800 5 Pressure Pump Single Nozzle Type

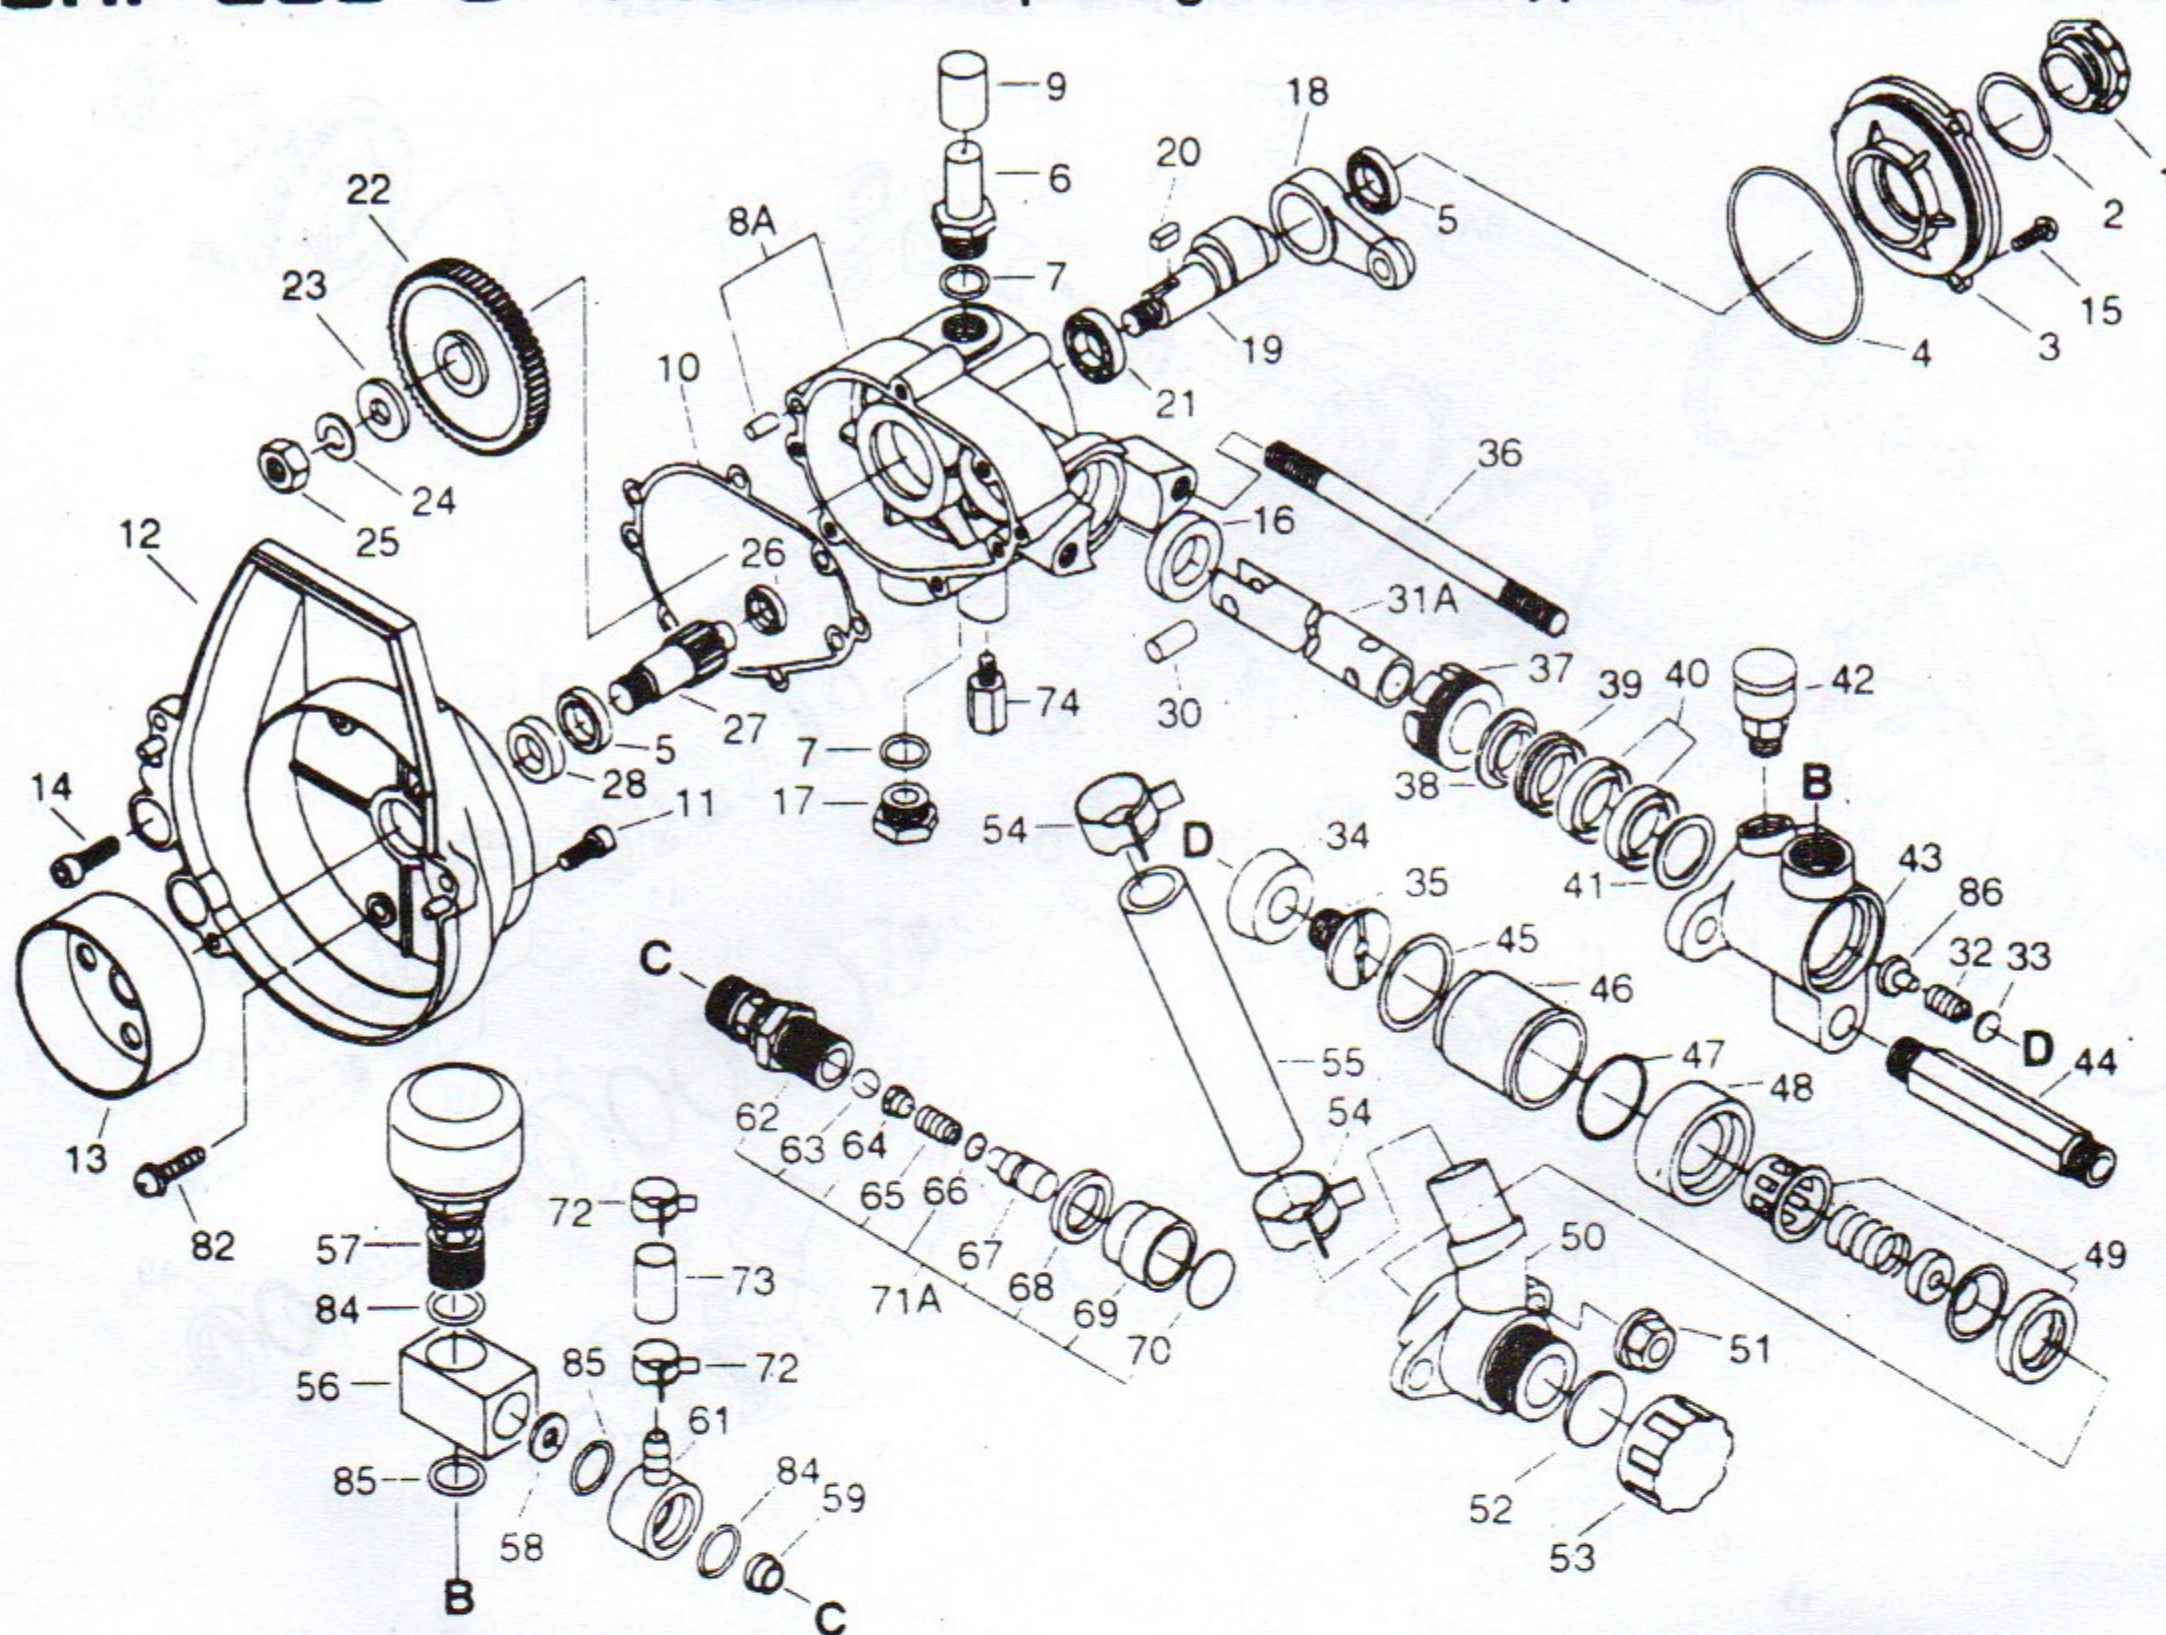


KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
72		132 013-1401 0	2	BAND	
73		706 150-7376 0	1	OUTLET HOSE	7*11*L200
74		706 150-7495 0	1	BOLT, 5	
82		900 242-0502 5	4	SCREW 5*25	

SHP-800 5 Pressure Pump Twin Nozzle Type

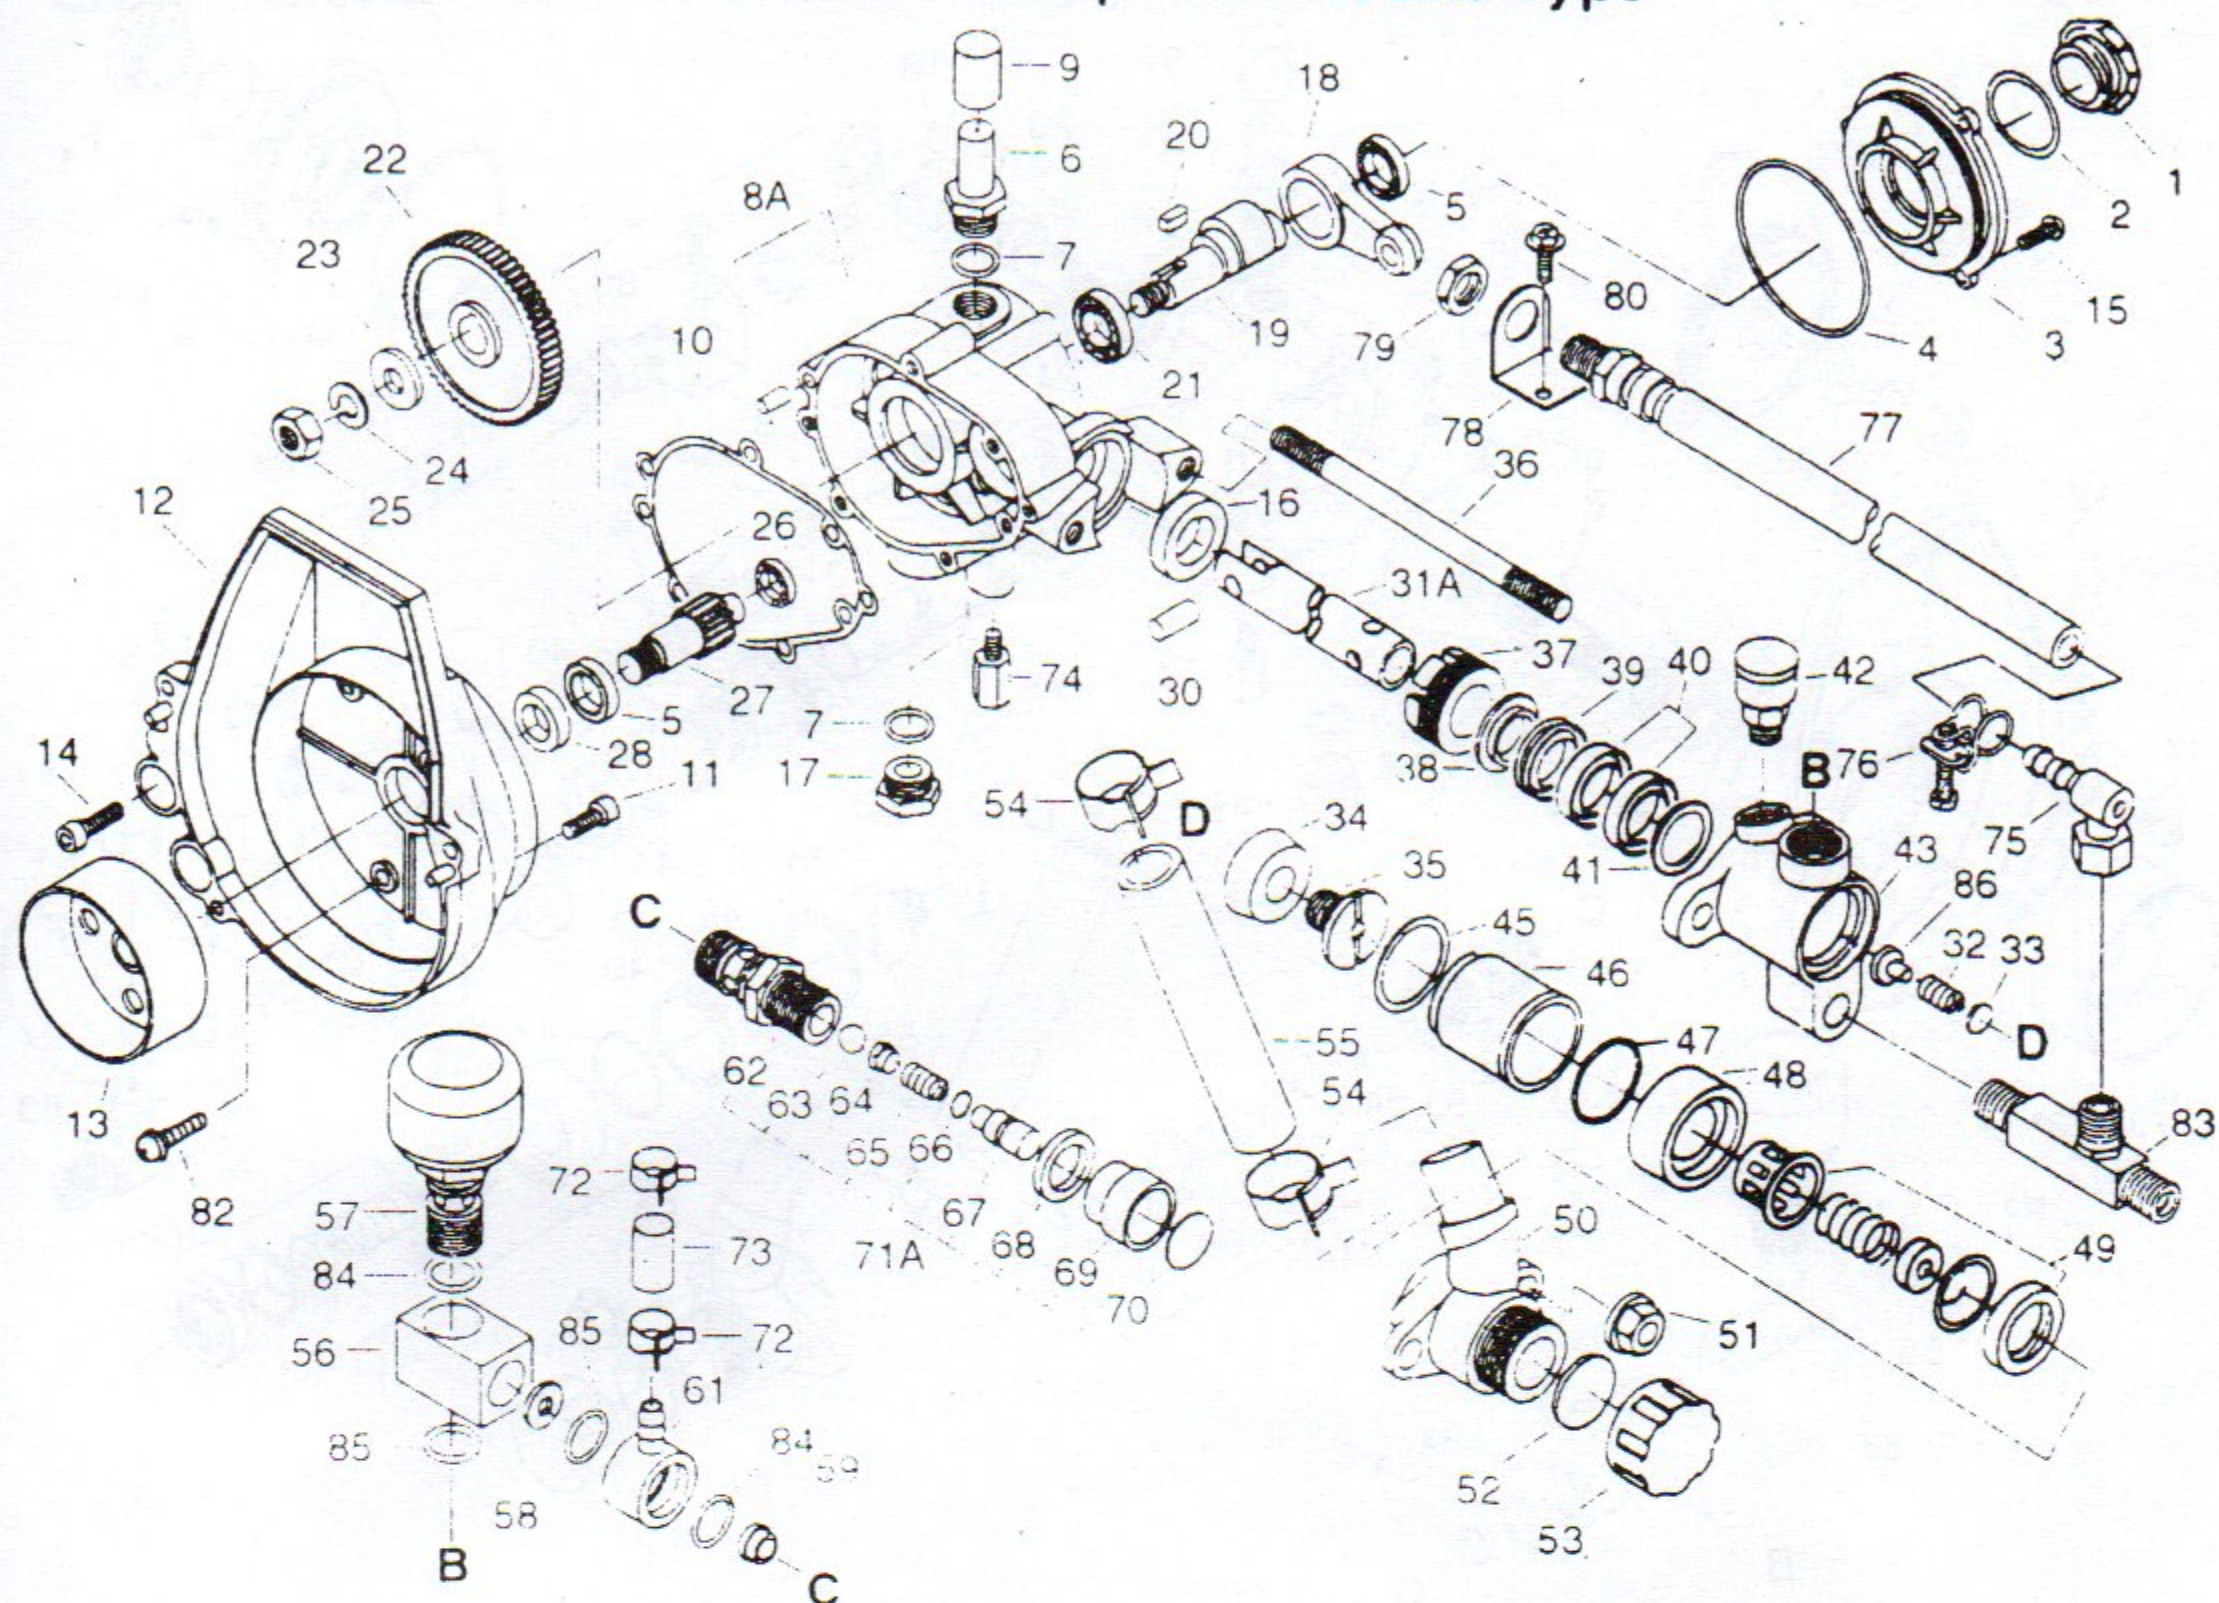


KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
1		706 150-0195 1	1	OIL MIRROR	
2		706 150-0278 1	1	O-RING	
3		706 020-0374 1	1	PUMP COVER	
4		706 020-0497 0	1	O-RING	
5		900 800-0600 1	2	BEARING BALL 6001	BB6001
6		706 020-0692 0	1	OILING BOLT	
7		900 722-0010 0	2	O-RING	
8A		706 020-08A4 3	1	PUMP BODY W/PIN	
9		706 020-0997 0	1	GROMMET	
10		706 020-1070 0	1	PACKING	
11		900 162-0501 8	4	BOLT H.S. 5*18	
12		706 020-1224 1	1	ENGINE COVER	
13		706 020-1325 0	1	CLUTCH DRUM	
14		900 162-0502 5	2	BOLT H.S. 5*25	
15		900 242-0401 2	3	SCREW 4*12	
16		706 020-1697 0	1	OIL SEAL	26*11 7
17		706 020-1792 0	1	SCREW	
18		706 020-1822 0	1	CONNECTING ROD	
19		706 020-1923 0	1	CRANKSHAFT	
20		706 020-2003 0	1	KEY	
21		900 810-0620 1	1	BEARING 6201	
22		706 020-2223 1	1	REDUCTION GEAR	
23		900 600-0000 8	1	WASHER 8	
24		900 605-0000 8	1	WASHER, SPRING 8	

SHP-800 5 Pressure Pump Twin Nozzle Type

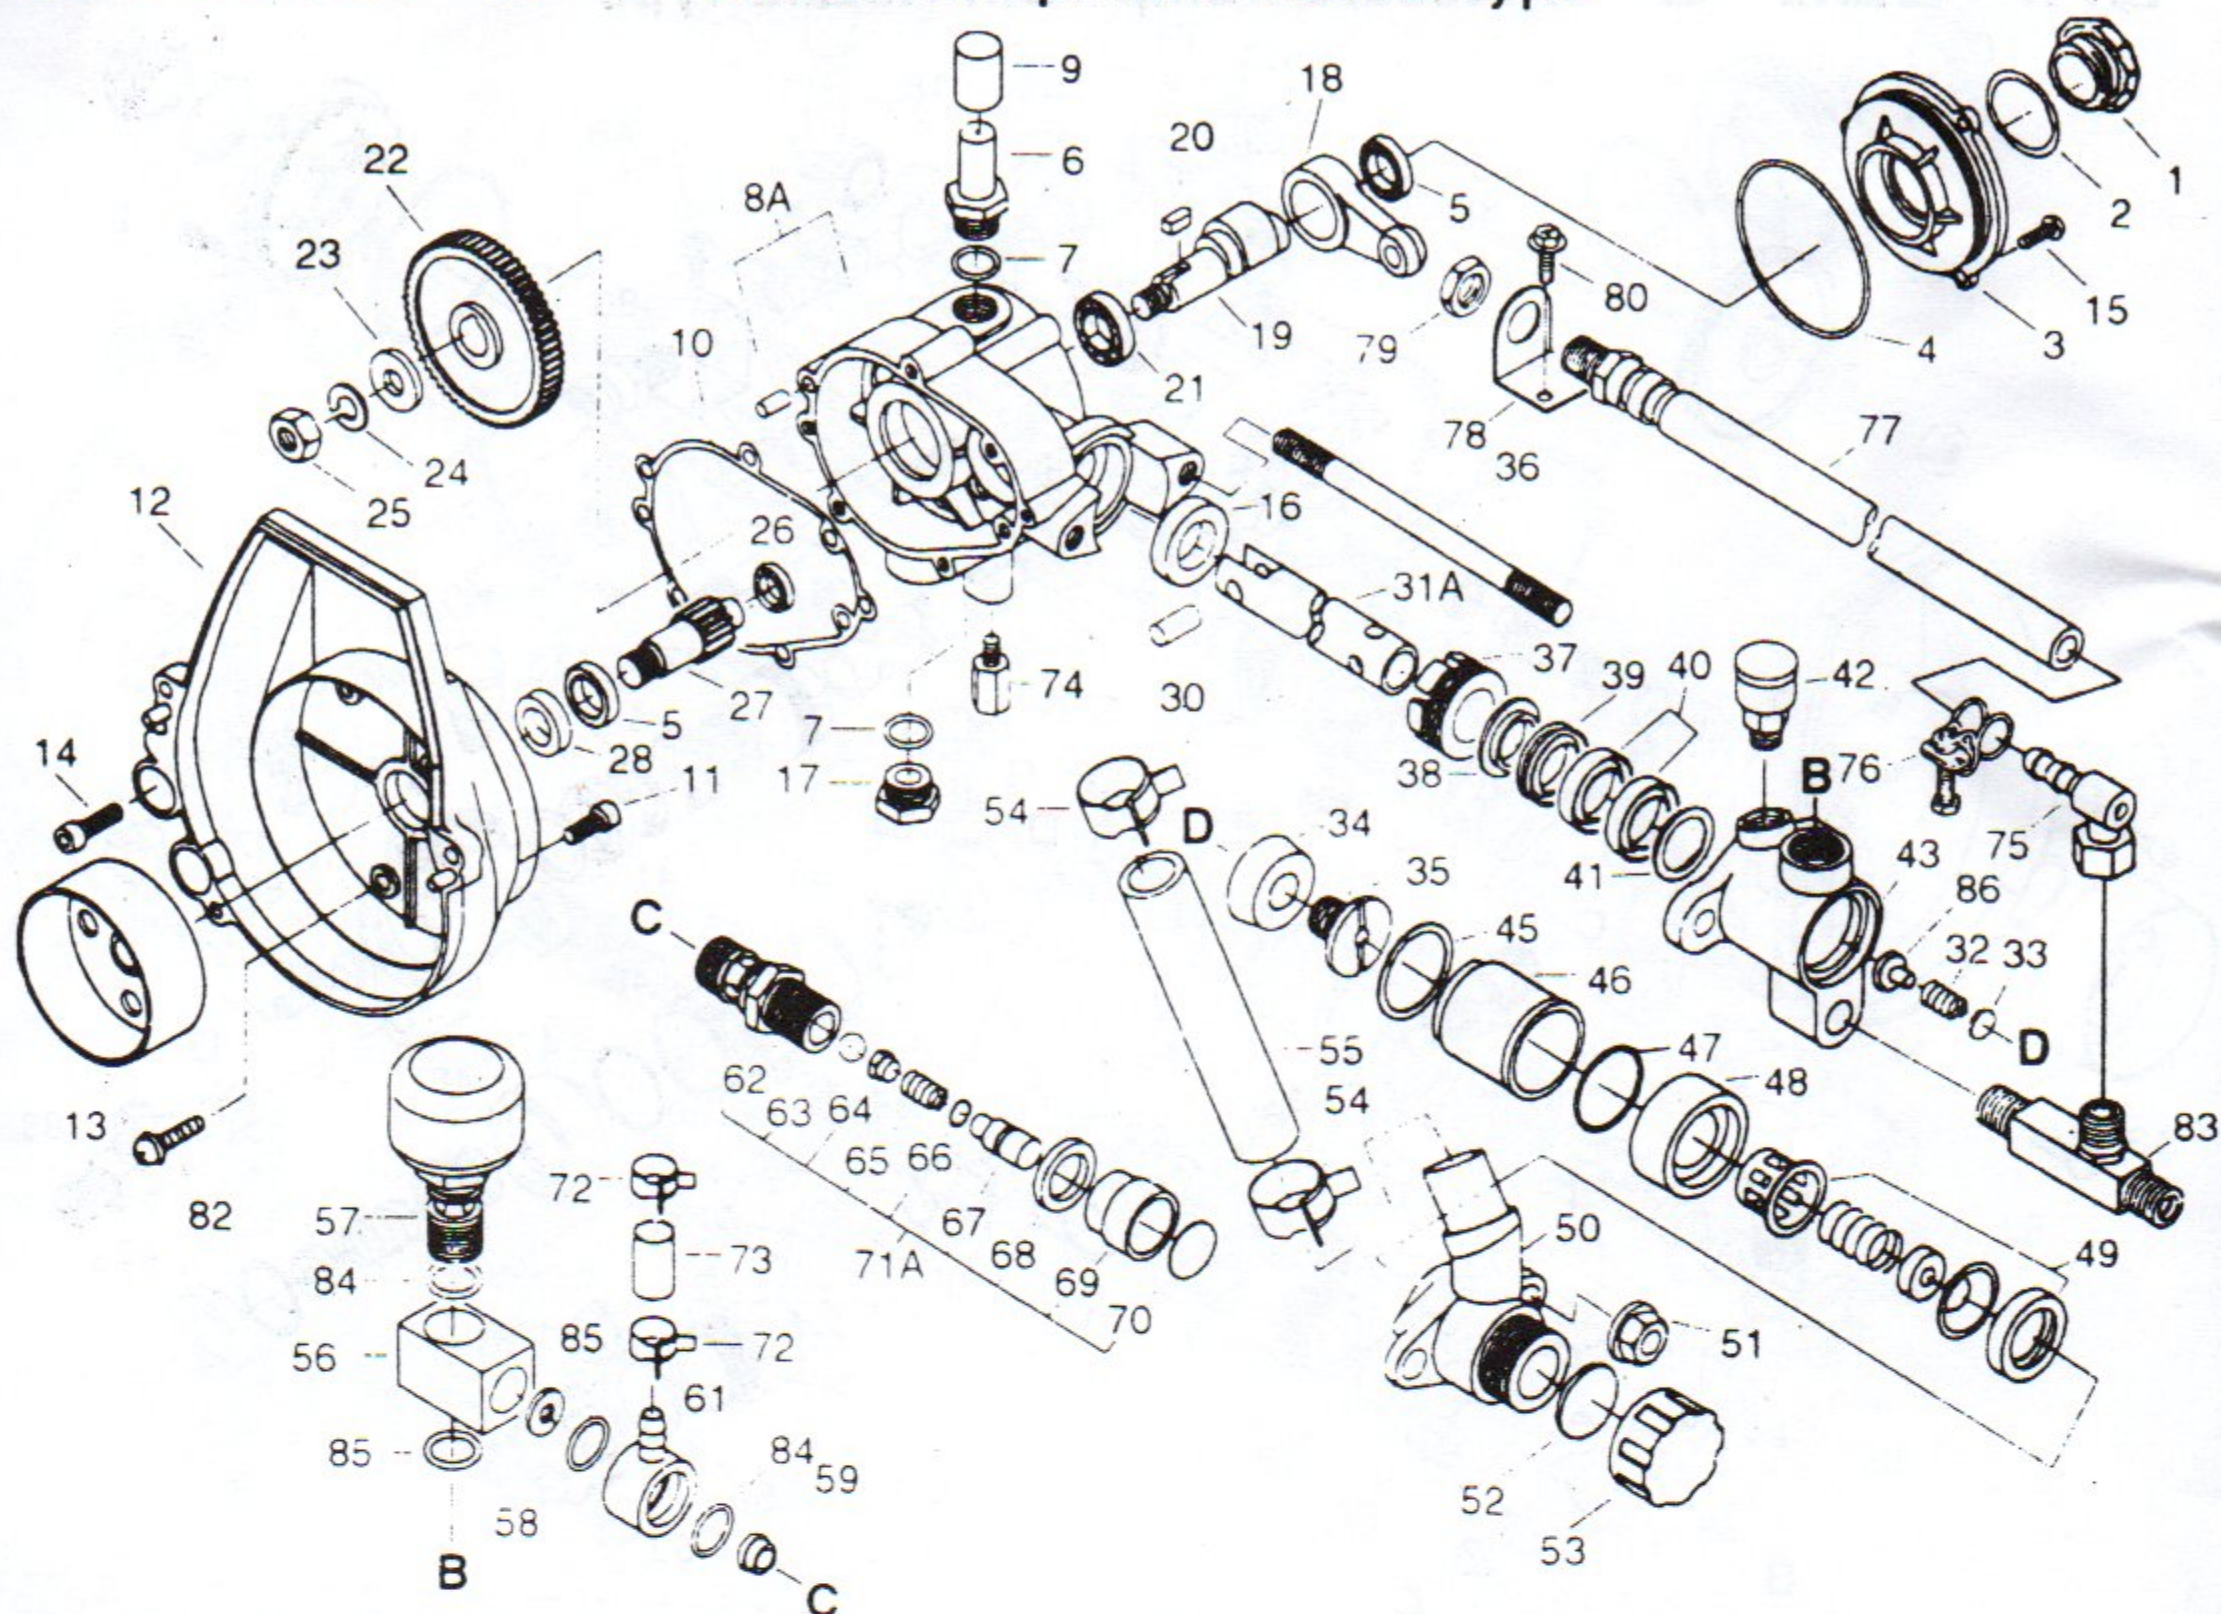


KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
25		706 020-2595 0	1	NUT	
26		900 800-0060 9	1	BEARING BALL 609	
27		706 020-2723 0	1	PINION SHAFT	
28		706 020-2897 0	1	OIL SEAL	
30		706 020-3023 0	1	PISTON PIN	
31A		706 020-31A1 3	1	PLUNGER W/SPRINGSEAT	
86	+	706 150-8606 0	1	SPRING SEAT	
32		706 020-3201 0	1	SPRING PLATE	
33		706 020-3371 0	1	PLATE	
34		706 020-3477 0	1	HARD RUBBER	
35		706 020-3591 1	1	BOLT PLUNGER	
36		706 020-3695 1	2	SCEW	
37		706 020-3762 0	1	NUT GLAND	
38		706 020-3872 0	1	L-PACKING	
39		706 020-3972 0	1	GREASE PACKING	
40		706 020-4077 1	1	V-PACKING ASY	
41		706 020-4172 0	1	V-PACKING	
42		706 020-4204 0	1	CUP GREASE ASY	
43		706 020-4342 1	1	CYLINDER	
45		706 020-4678 0	1	PACKING	
46		706 020-4741 2	1	SLEEVE	
47		706 020-4897 0	1	O-RING	
48		706 020-4982 1	1	VALVE PLUNGER	
49		706 020-5000 0	1	VALVE ASY PLUNGER	

SHP-800 5 Pressure Pump Twin Nozzle Type

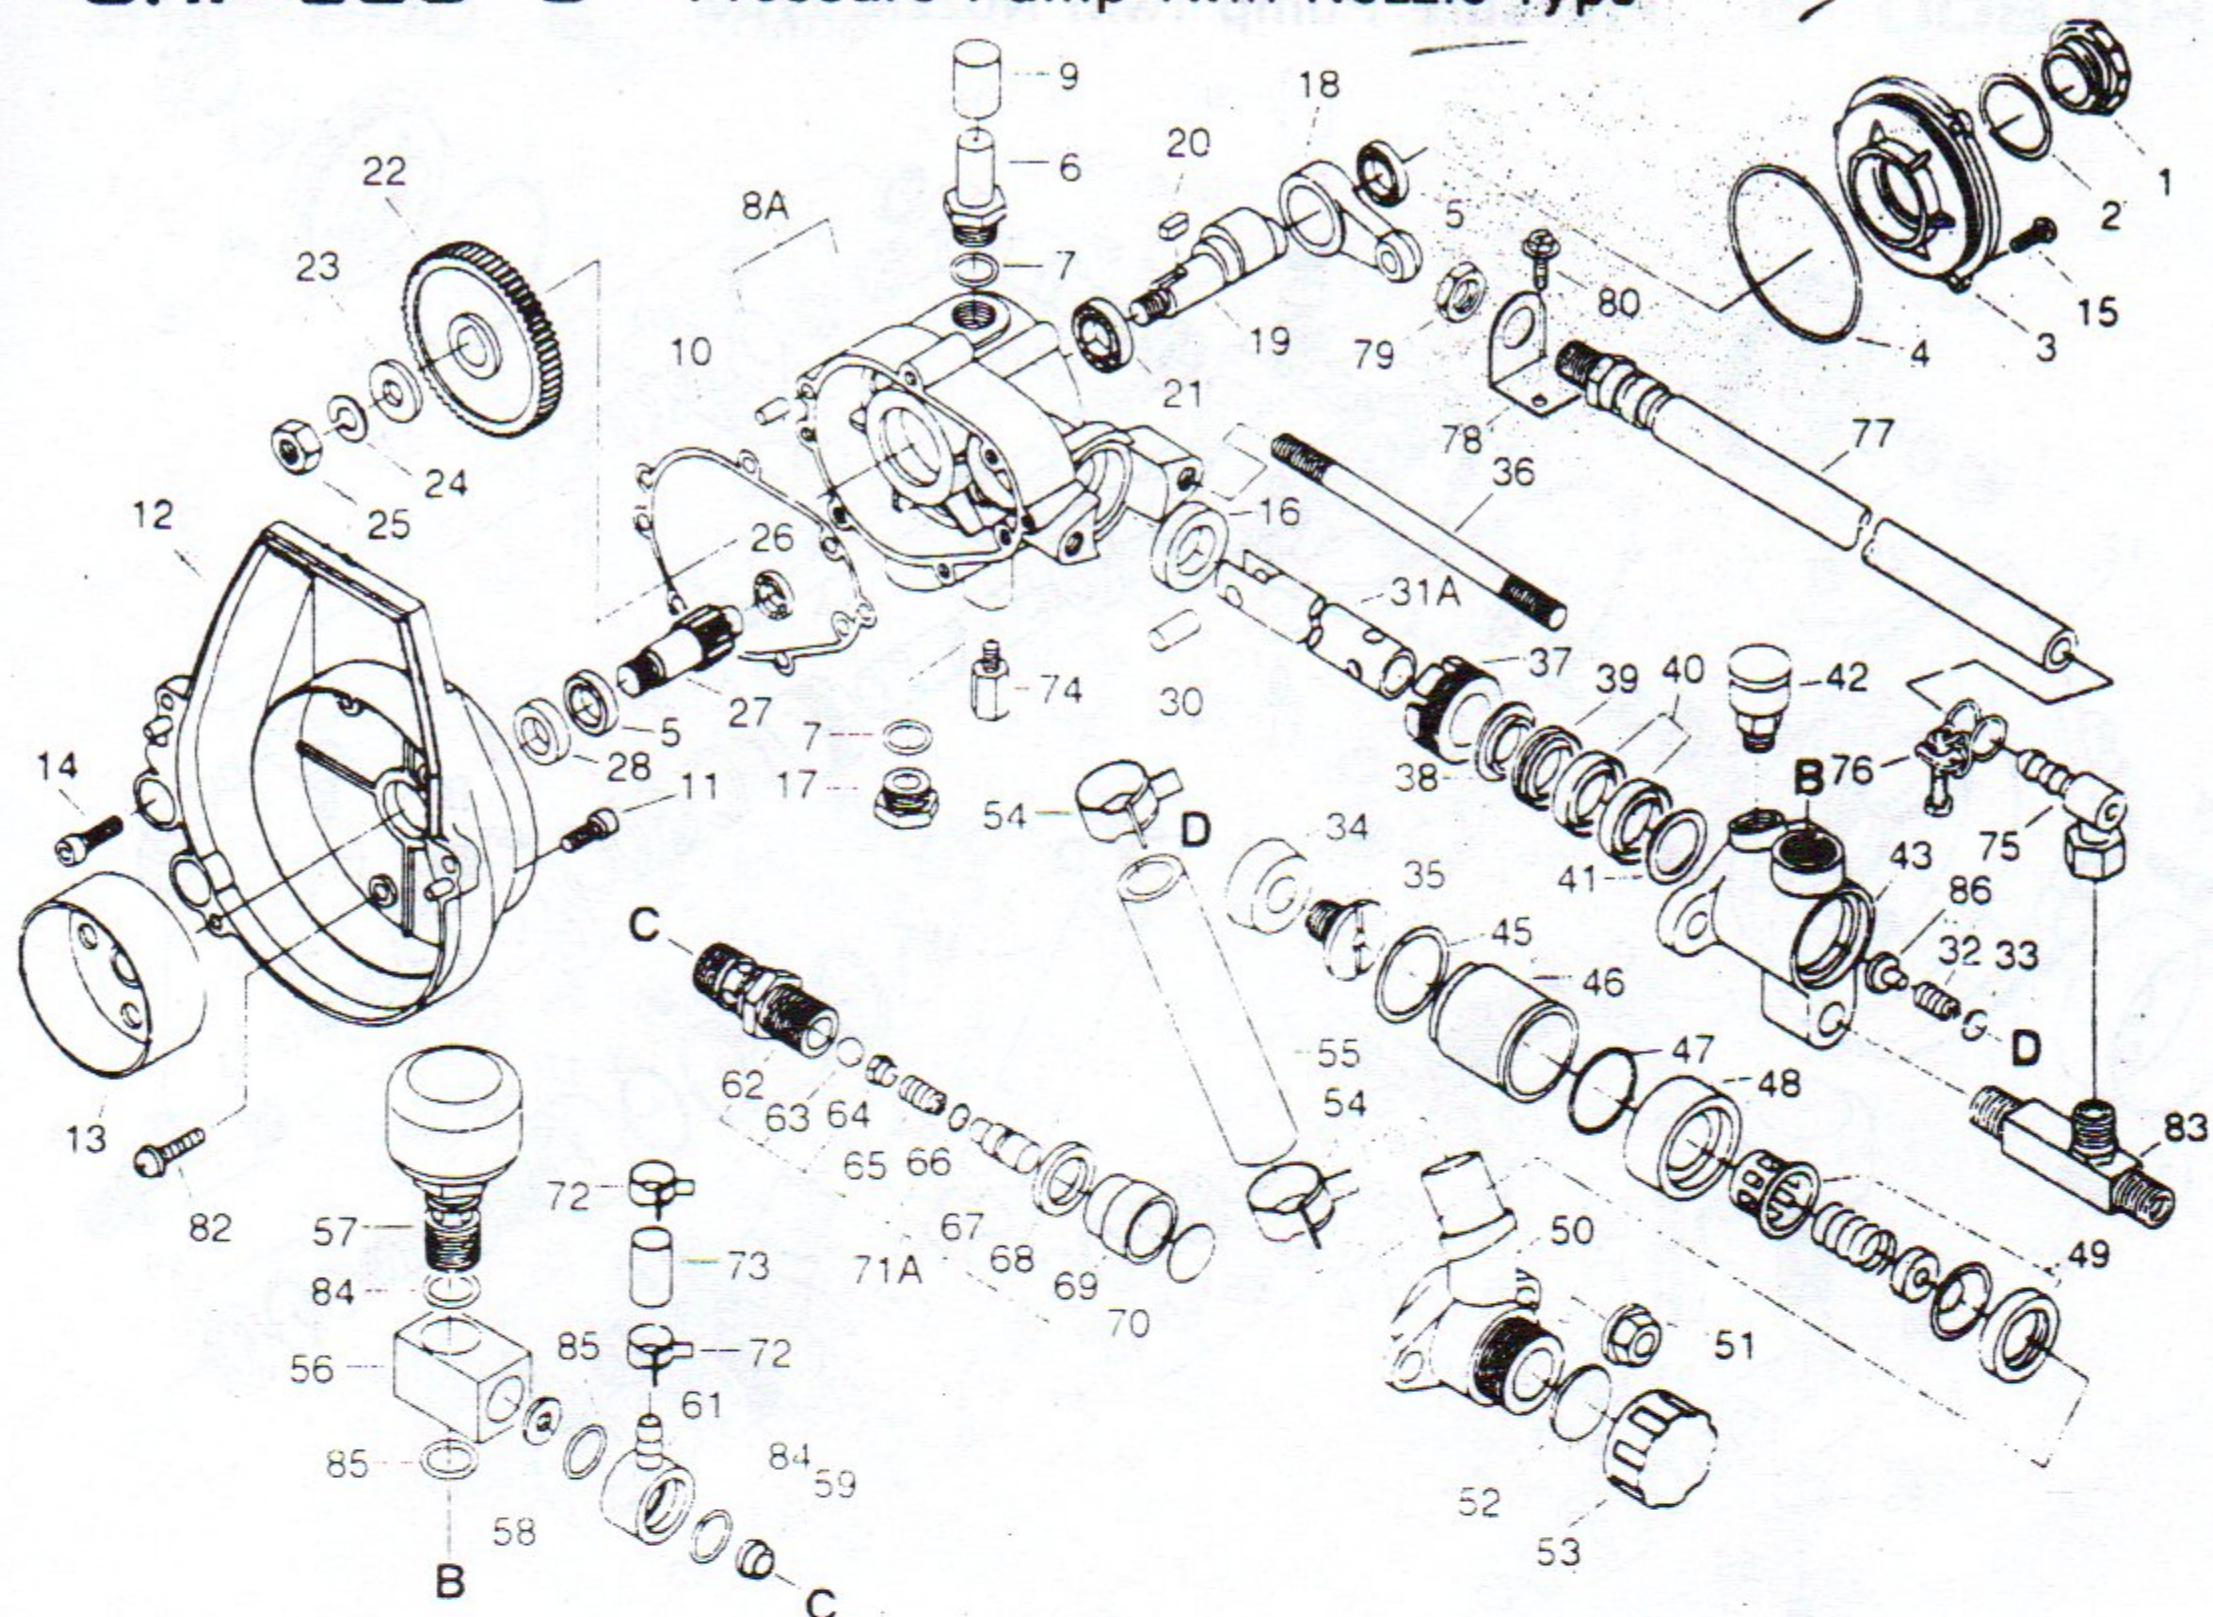


KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
50		706 150-5052 0	1	INTAKE PIPE	
51		706 020-5295 0	2	NUT	
52		250 210-1161 0	1	GASKET DRAIN	
53		250 211-1161 0	1	CAP. DRAIN	
54		706 150-5493 0	2	BAND.D21	
55		706 150-5577 0	1	INLET HOSE	15*21*L90
56		706 020-5562 1	1	CONNECT.REGULATOR	
57		706 020-5641 1	1	AIR CHAMBER	
71A		706 020-60A2 1	1	REGULATOR ASY	
58	+	706 020-6176 0	1	WASHER	
59	+	706 020-6201 2	1	PACKING	
61	+	706 020-6462 0	1	OUTLET CONNECTOR	
62	+	706 020-6562 1	1	OUTLET	
63	+	706 020-6601 1	1	PRESSURE STEEL BALL	
64	+	706 020-6782 0	1	SPRING SEAT	
65	+	706 020-6801 0	1	PRESSURE SPRING	
66	+	900 720-0000 7	1	O-RING 7	
67	+	706 020-7062 0	1	REGULATOR SHAFT	
68	+	706 020-7192 0	1	FIXED NUT	
69	+	706 020-7292 0	1	REGULATOR NUT	
70	+	706 020-7309 1	1	REGULATOR DECAL	
84	+	900 720-0125 0	2	O-RING 12.5	
85	+	900 720-0001 6	2	O-RING 16	
72		132 013-1401 0	2	BAND	

SHP-800 5 Pressure Pump Twin Nozzle Type

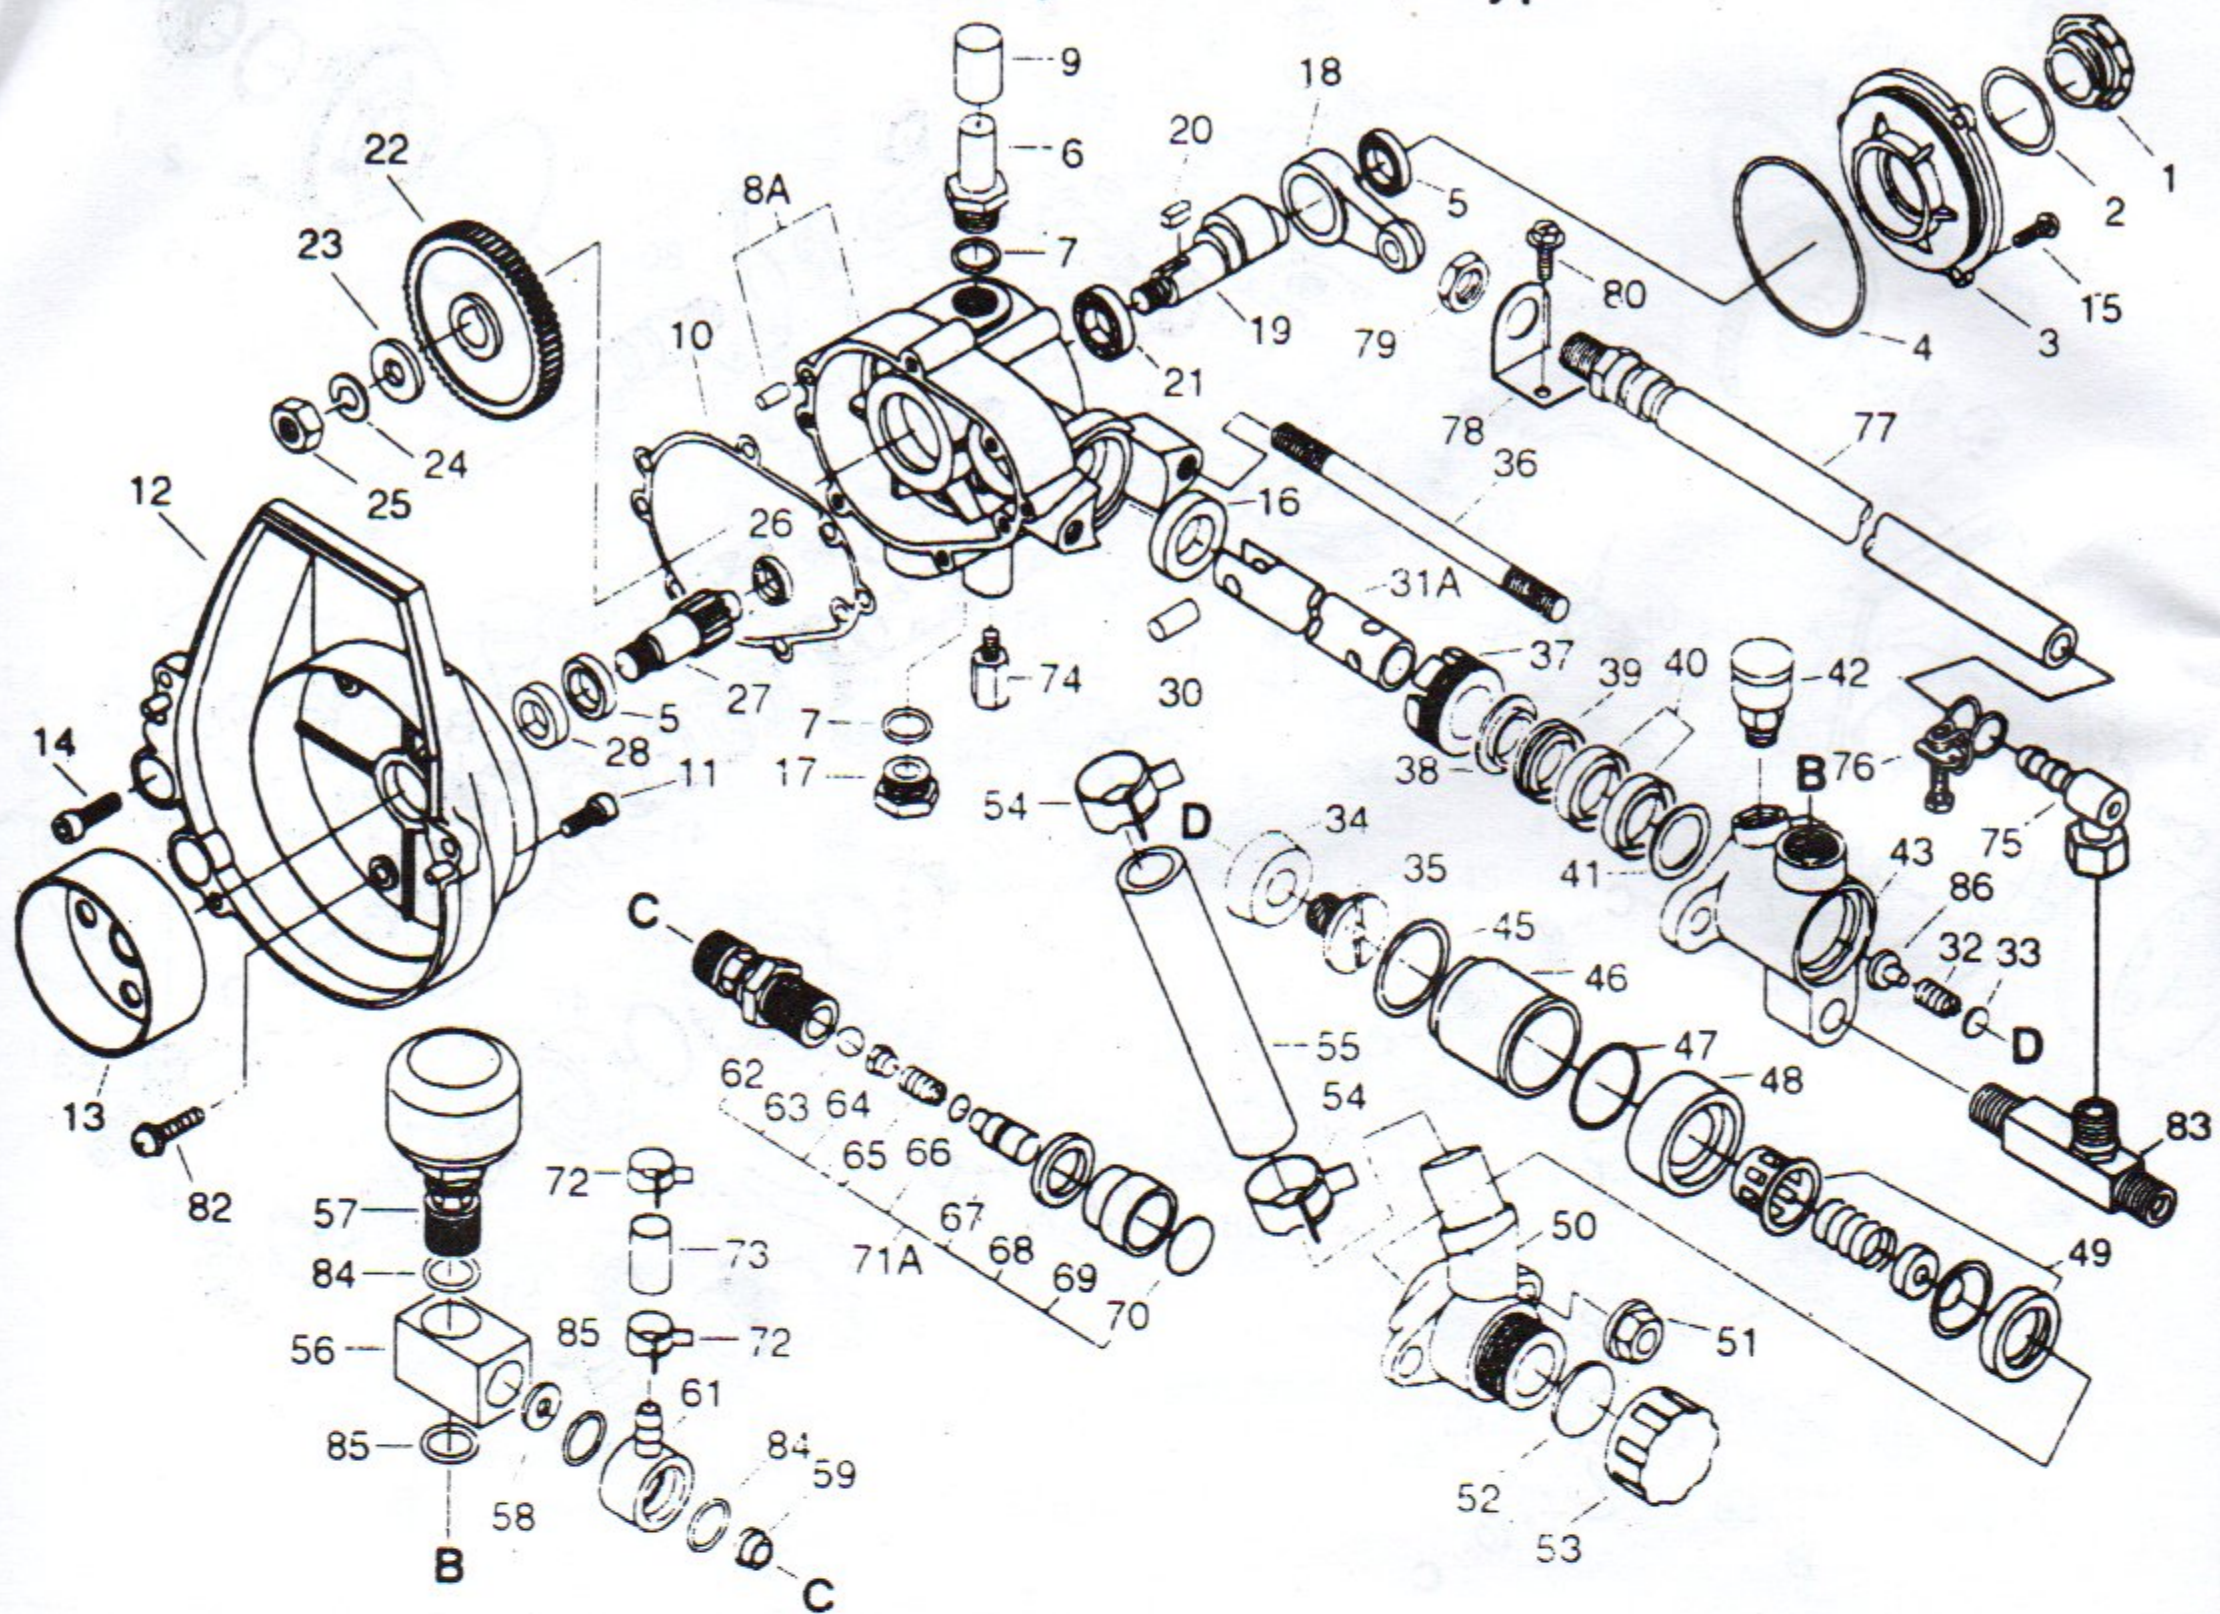


KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
73		706 150-7376 0	1	OUTLET HOSE	7'11" L200
74		706 150-7495 0	1	BOLT 5	
75		706 150-7572 0	1	JOINT, CONNECTOR	
76		706 150-7695 0	1	BAND SPRING	
77		706 150-7776 0	1	HOSE, SHORT	
78		706 150-7845 0	1	PLATE, FIXING	
79		706 150-7995 0	1	NUT	
80		900 242-0501 4	2	SCREW	
82		900 242-0502 5	4	SCREW 5*25	
83		706 150-8302 0	1	3-HEAD JOINT	

SHP-800 6 Frame

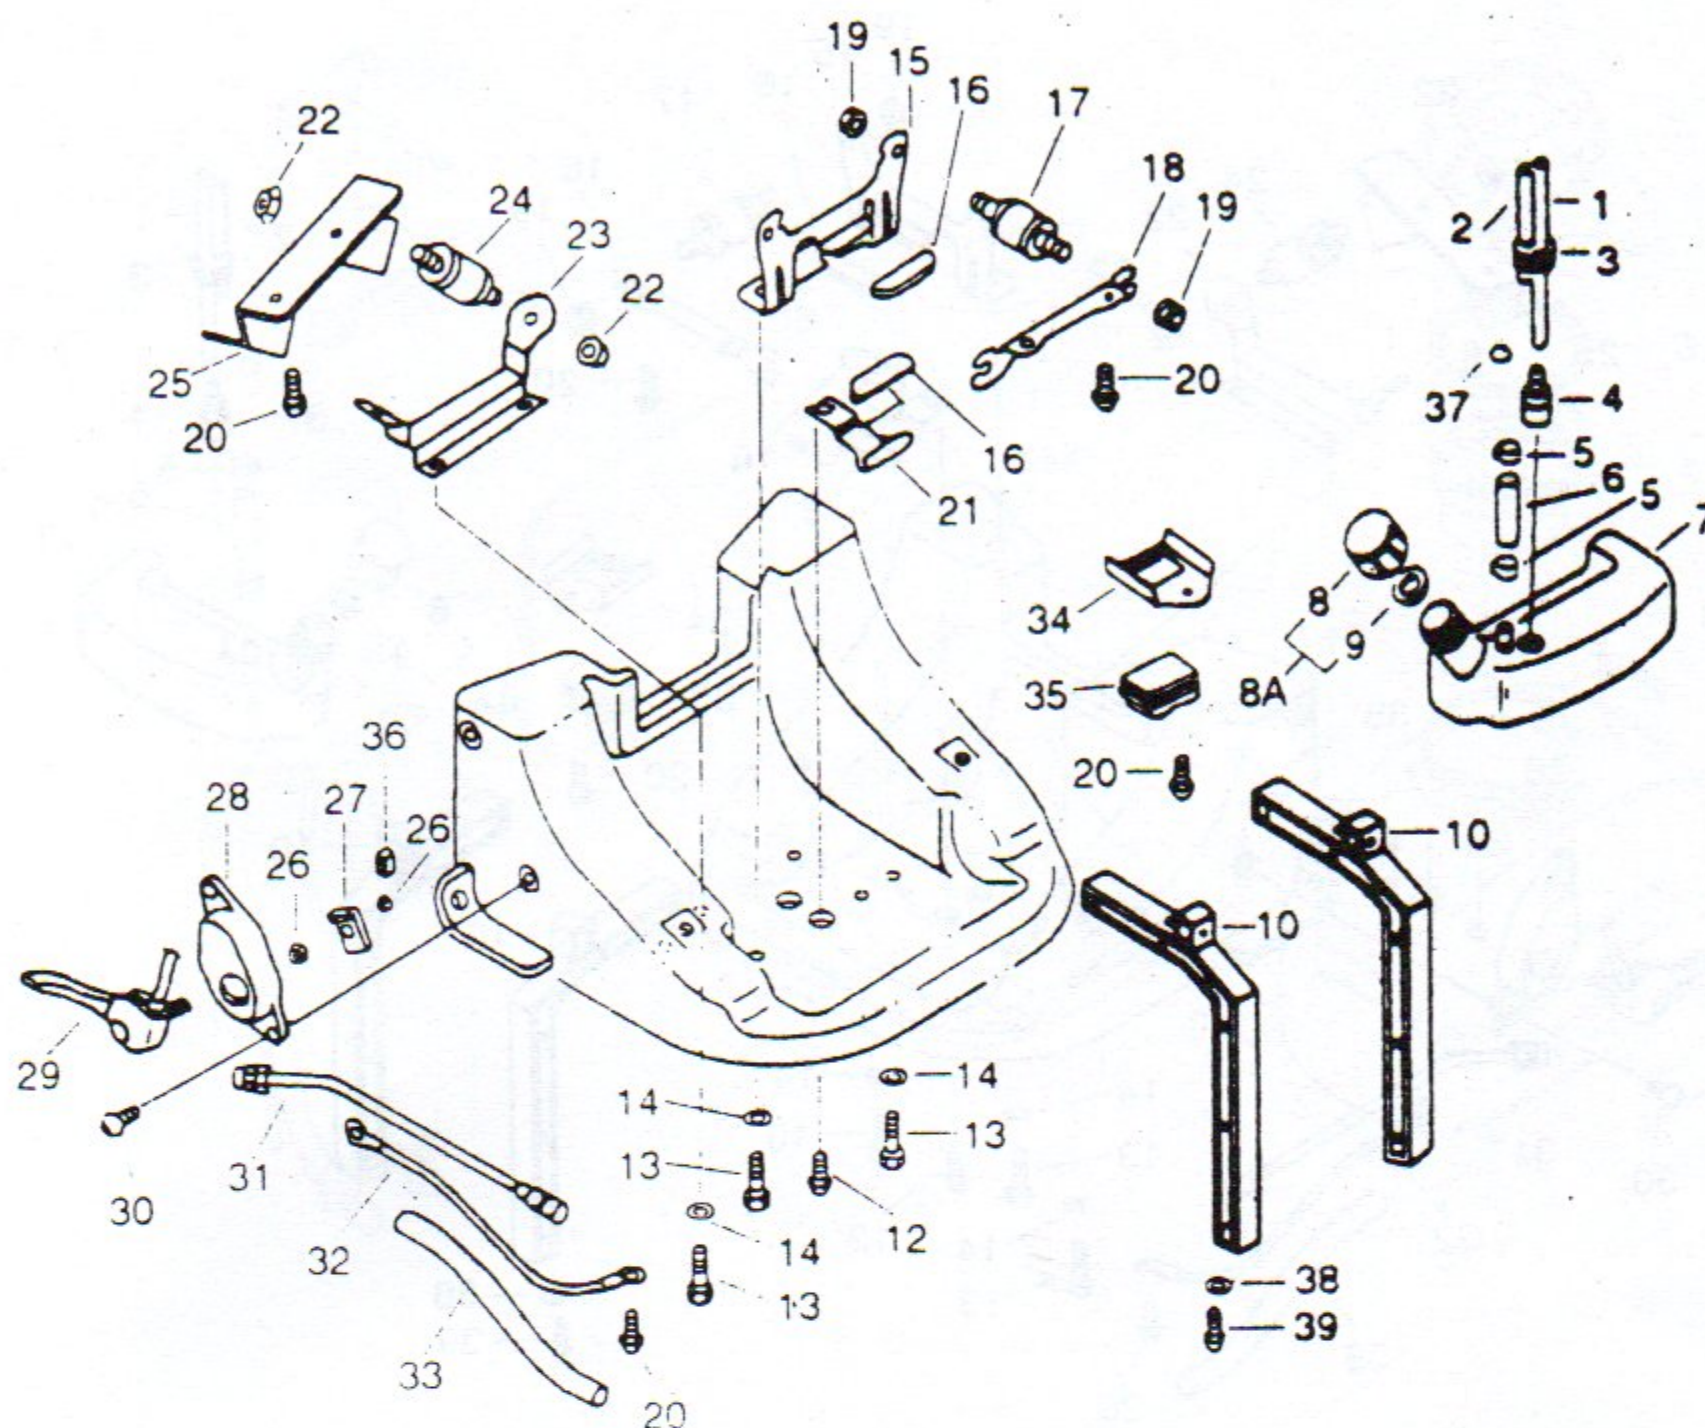


KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
1A		437 210-1513 0	1	PIPE, OIL	
2	+	706 160-0206 1	1	PIPE	
3		132 115-4433 0	1	GROMMET	
4		131 205-1983 0	1	STRAINER, FUEL	
5		132 013-1401 0	2	BAND	
6		706 160-0606 2	1	FUEL OUTLET HOSE	7.94*11.11*L50-55
7		706 160-0756 0	1	FUEL TANK	
8A		706 160-09A7 0	1	FUEL TANK CAP ASY	
8	+	706 040-3176 1	1	FUEL TANK CAP	
9	+	706 160-0977 1	1	PACKING, F TANK CAP	
10		706 160-1046 0	2	FRAME STAY	
12		900 242-0601 5	4	SCREW 6*15	
13		900 104-0601 6	4	BOLT 6*16 SUS	
14		706 160-1495 0	4	WASHER	6.5*19*T2
15		131 910-1401 0	1	BRACKET, FUEL TANK	
16		131 920-2823 0	2	CUSHION, FUEL TANK	
17		100 907-4593 0	2	CUSHION	
18		104 932-1401 1	1	PIECE, FRAME	
19		900 518-0000 5	4	NUT, FLANGE 5	
20		900 242-0501 2	5	SCREW 5*12	
21		131 918-1401 0	1	BRACKET, FUEL TANK	
22		900 518-0000 6	4	NUT, FLANGE 6	
23		706 160-2345 0	1	PLATE ANGLE	
24		706 040-4187 0	2	CUSHION	

BHP-800 6 Frame

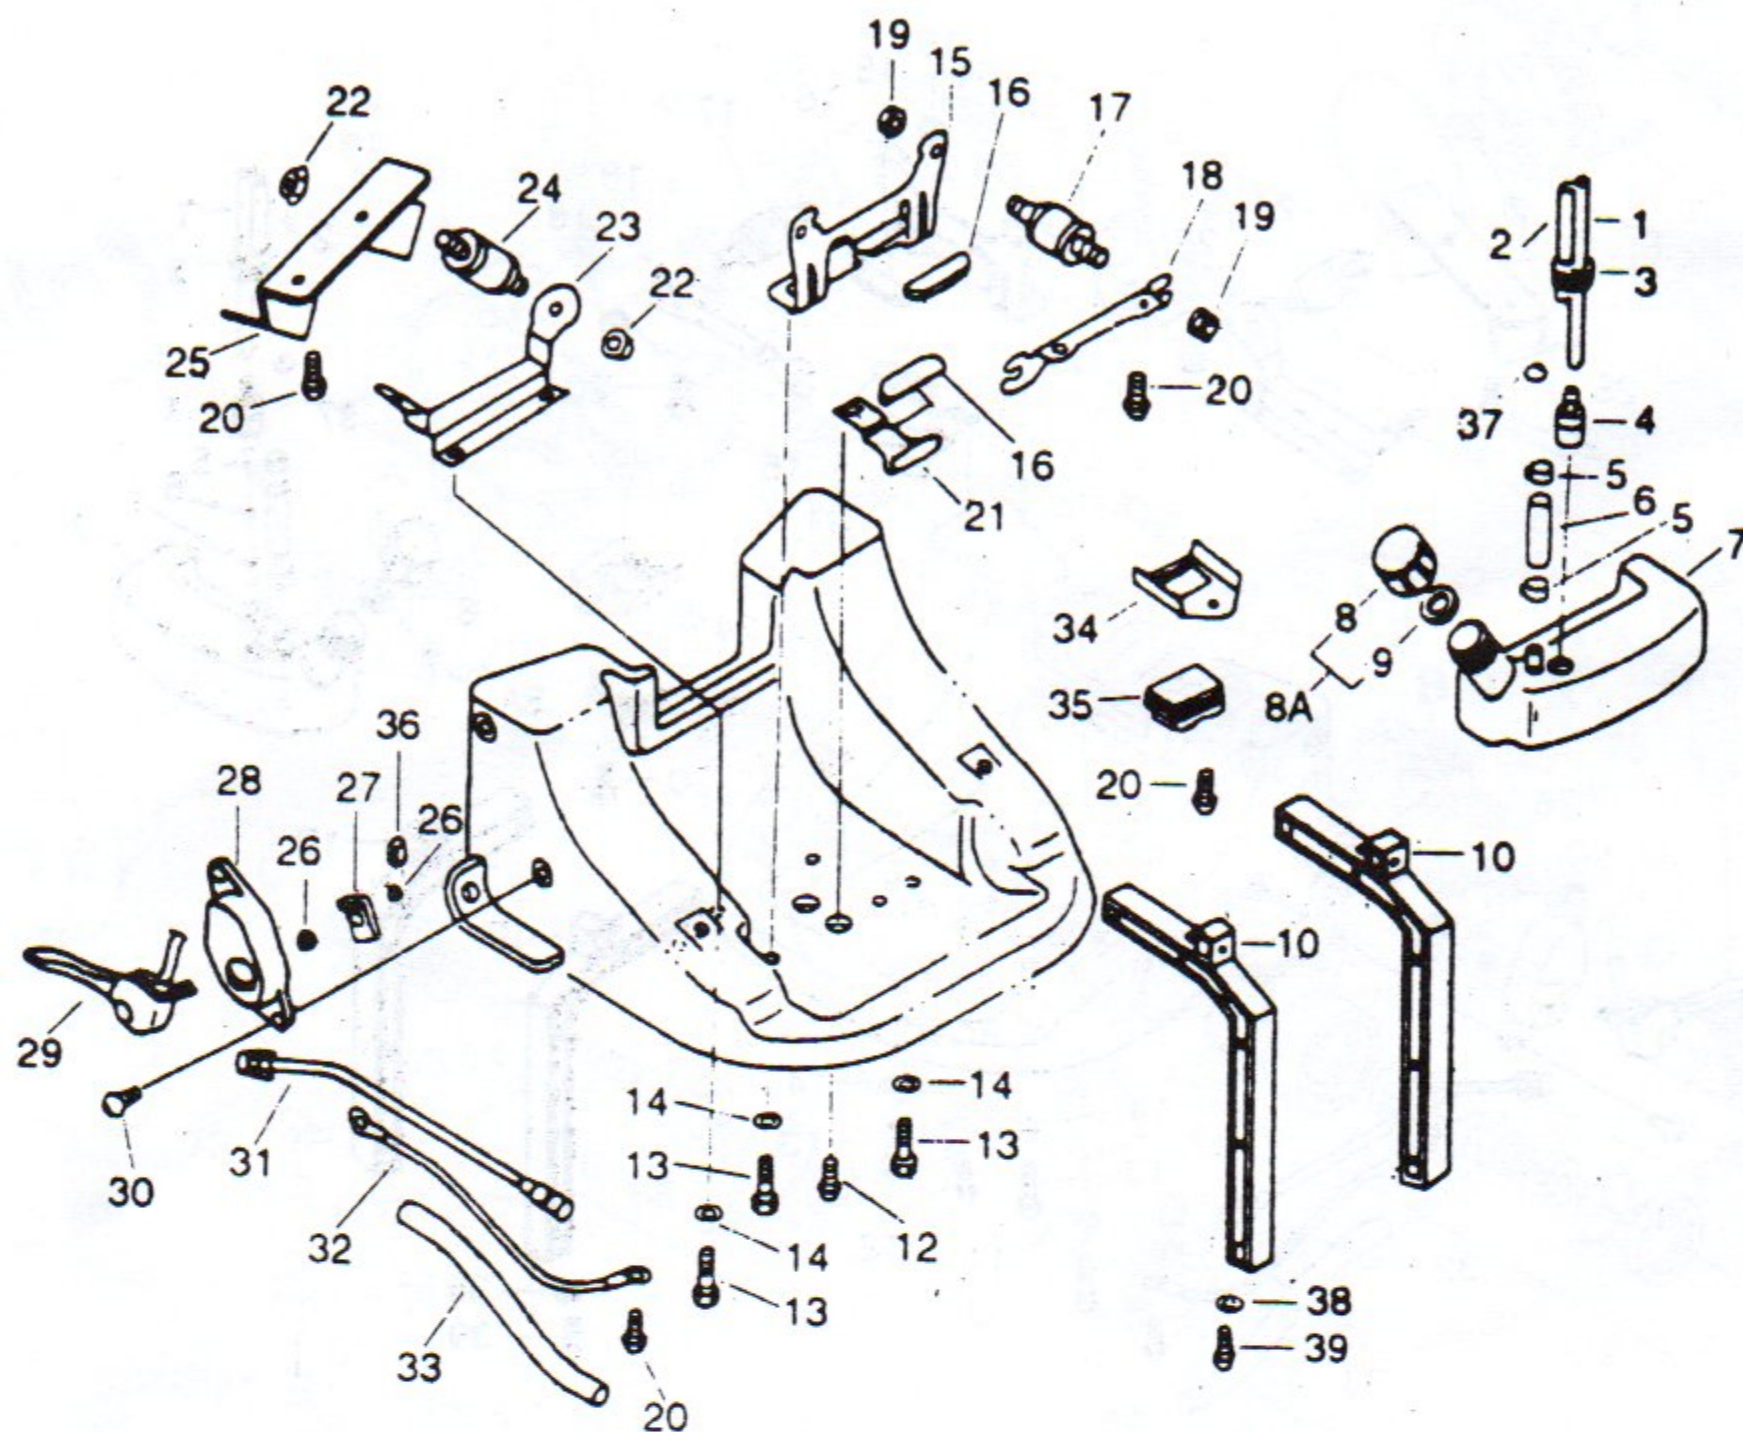


KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
25		706 160-2545 0	1	PLATE ANGLE	
26		900 500-0000 5	2	NUT 5	
27		706 160-2705 0	1	FIXED PLATE	
28		178 123-1401 0	1	BRACKET THROTTLE	
29		706 160-2926 0	1	THROTTLE CONTROL	
30		900 242-0502 0	2	SCREW 5*20	
31		706 040-4700 0	1	STOP SWITCH	
32		706 160-3200 0	1	LEAD	
33		706 160-3376 0	1	PROTECTION PIPE	D12.8*0.5T*170L
34		110 060-1401 0	1	PLATE,ANGLE	
35		305 117-0336 0	1	CUSHION	
36		706 160-3687 0	1	GROMMET	
37		132 013-2663 0	1	CLIP	
38		706 170-1185 0	2	WASHER	
39		706 170-1091 0	2	SCREW TAPPING	

SHP-800 7 Chemical Tank

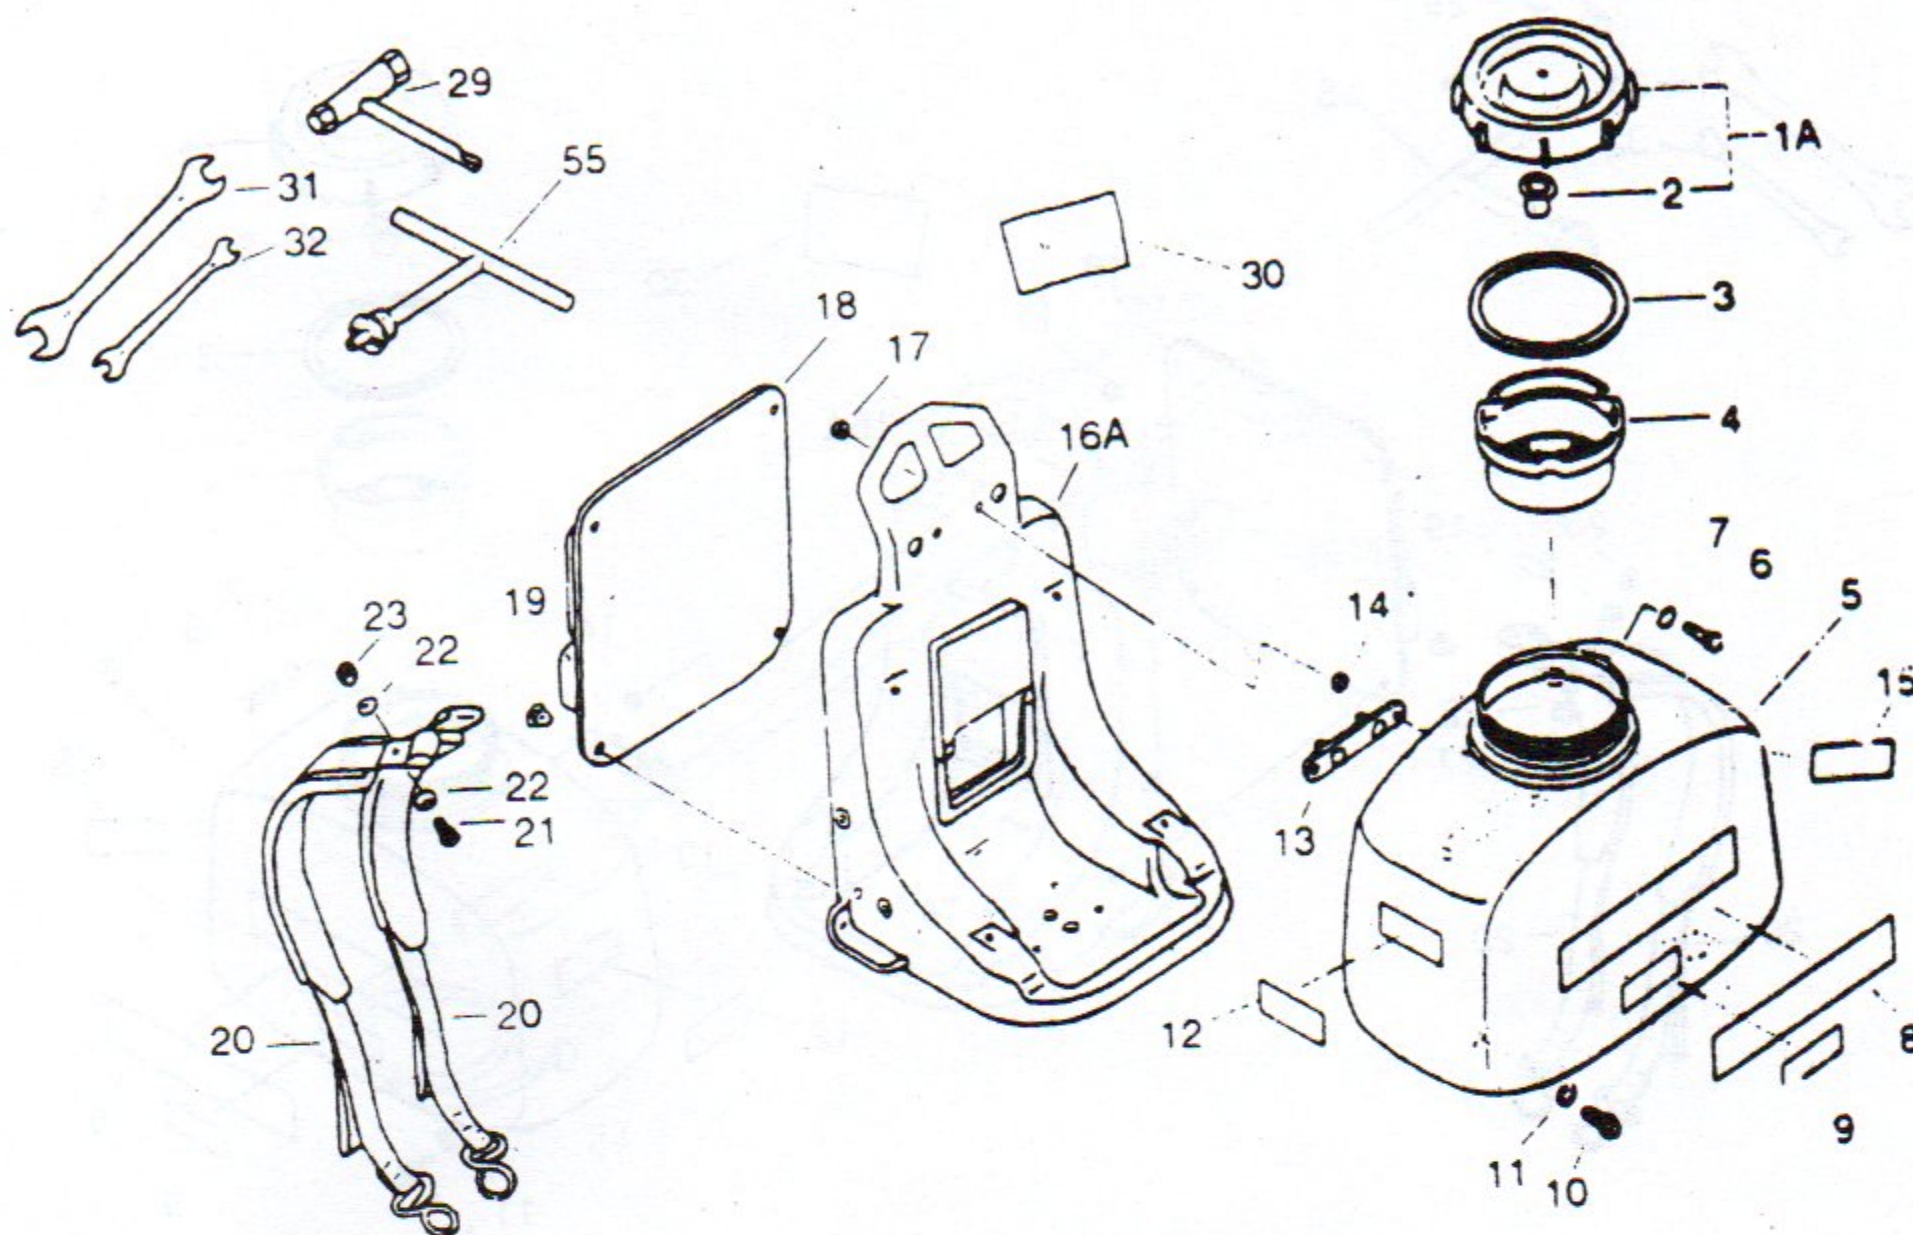


KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
1A		706 040-0176 1	1	CHEMICAL TANK CAP ASY	
2		706 040-0276 0	1	INSIDE CAP	
3		706 040-0377 0	1	CHEMICAL TANK GASKET	
4		706 040-0666 1	1	CHEMICAL FILTER	
5		706 170-0556 0	1	CHEMICAL TANK	
6		253 913-1091 0	2	BOLT	
7		900 722-0010 0	2	O-RING P-10A	
8		890 118-1271 0	1	LABEL ECHO	SHP 800
9		706 170-0909 1	1	LABEL MODEL	
10		706 170-1091 0	4	SCREW TAPPING	D5 2 D16 2T
11		706 170-1185 0	4	WASHER	ENGLISH
12		706 170-1209 1	1	LABEL CAUTION S	SPANISH
12		706 170-1209 2	1	LABEL CAUTION S	
13		253 910-1401 0	1	BRACKET TANK	
14		900 518-0000 6	2	NUT FLANGE 6	ENGLISH
15		706 040-0509 1	1	LABEL CAUTION L	SPANISH
15		706 040-0509 2	1	LABEL CAUTION L	COMMON FOR TWIN NOZZLE TYPE
16A		706 170-16A6 0	1	FRAME BACKPACK	
17		706 170-1796 0	2	NUT FULANGE 6	
18		300 111-1401 0	1	CUSHION KNAPSACK	
19		706 170-1906 0	4	CLIP	
20		706 170-2008 0	2	HARNESS BACKPACK	
21		900 216-0501 4	2	SCREW 5*14	5 2*22*2 0
22		706 040-2085 0	4	WASHER HARNESS	

SHP-800 7 Chemical Tank

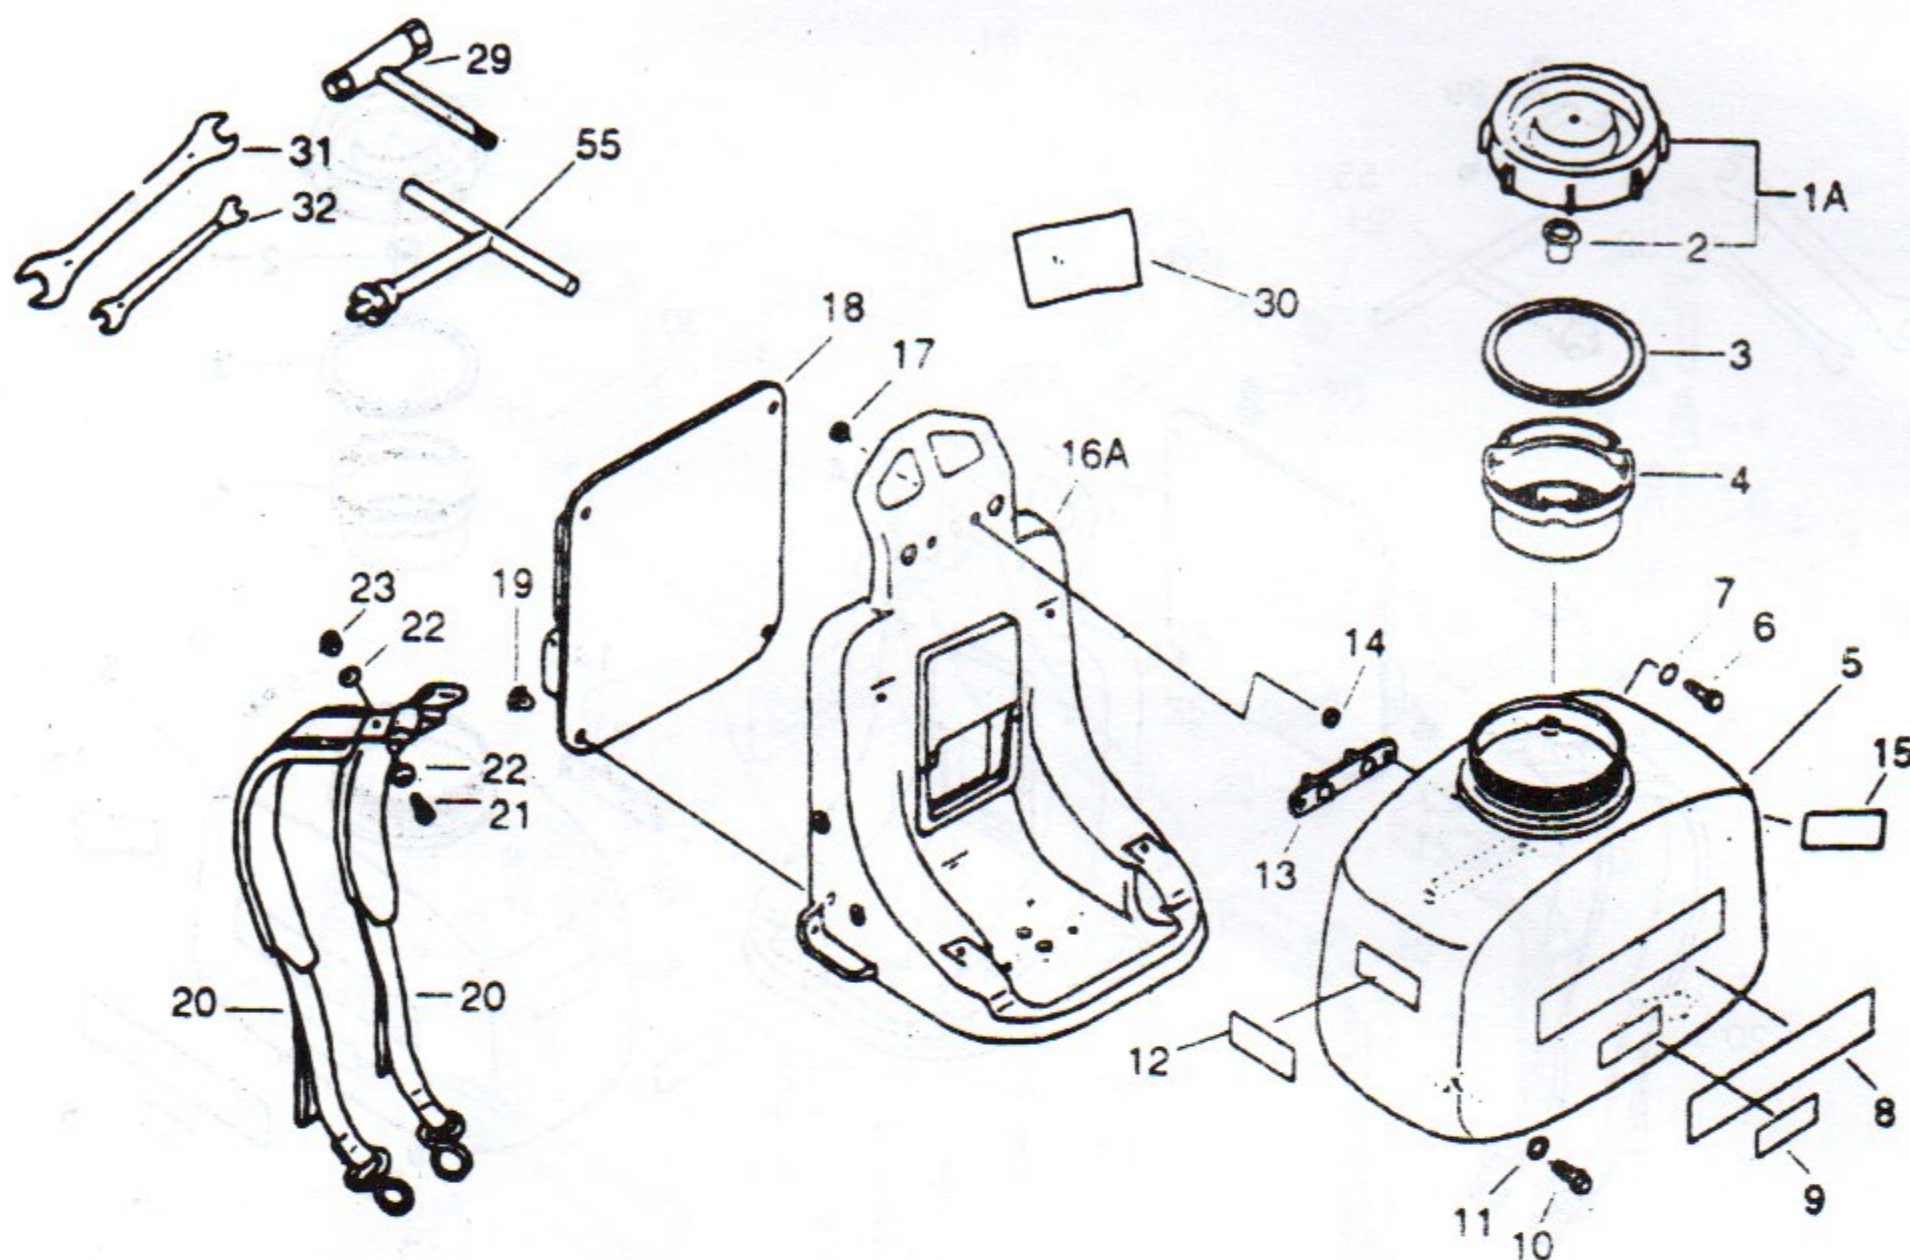


KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
23		900 560-0000 5	2	NUT LOCK	M5 U NUT
29		895 410-1063 0	1	WRENCH W/S DRIVER	
30		706 170-3006 0	1	POLY BAG	
31		706 170-3103 0	1	SPANNER 14*17	
32		706 170-3203 0	1	SPANNER 10*12	
55		706 170-5503 0	1	TOOL DRIVER	

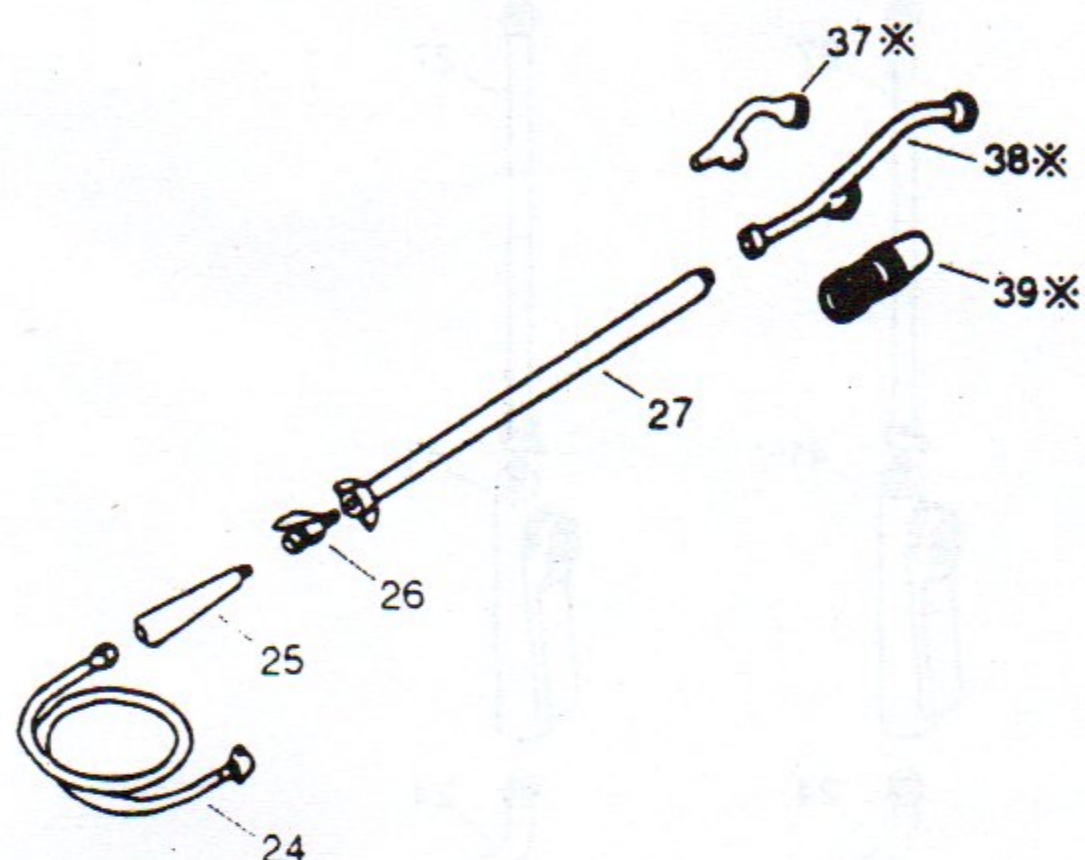

KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
24		706 040-6076 2	1	SPRAY HOSE AS Y	PF1/4
25		706 040-6146 1	1	NOZZLE GRIP	PF1/4
26		706 040-6262 1	1	NOZZLE VALVE	PF1/4
27		706 170-2772 2	1	NOZZLE PIPE	PF1/4
37※		706 170-3796 1	1	2-NOZZLE	PLASTIC K-5 PF1/4
38※		706 170-3872 1	1	2-NOZZLE	METAL K-5 PF1/4
39※		706 170-3992 0	1	1-NOZZLE	METAL PF1/4

Only one type of nozzle is supplied with your machine.

Other type of nozzles are available as option.

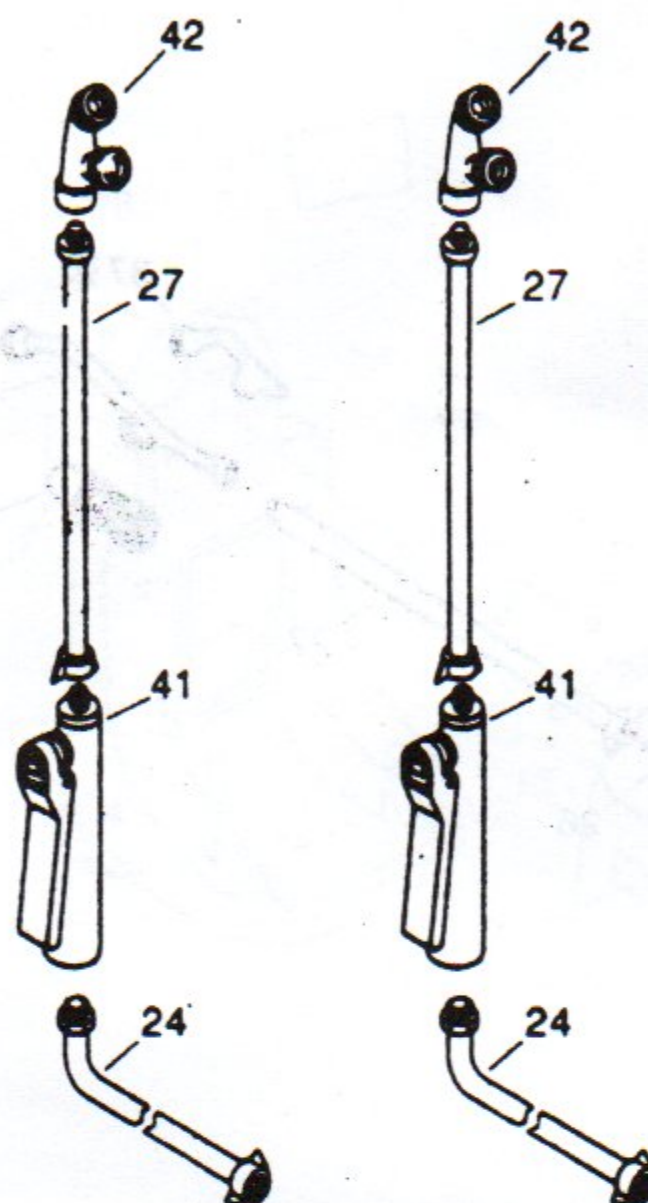

KEY	LV	PART NUMBER	QTY	DESCRIPTION	REMARKS
24		706 040-6076 2	2	SPRAY HOSE ASY	PF1/4
27		706 170-2772 2	2	NOZZLE PIPE	PF1/4
41		224 400-1371 0	2	NOZZLE COCK LEVER	
42		224 100-1401 1	2	2-NOZZLE PLASTIC D-6	

YAMABIKO CORPORATION

7-2, SUEHIROCHO 1-CHOME, OHME, TOKYO 198-8711, JAPAN
PHONE:81-428-32-6118 FAX:81-428-32-6145

///ECHO.

706 170-3509 2

Printed in Japan
Release notice No.TKC-001,002,003,004
TAIWAN SETSUHEN TK-024
KIORITZ SETSUHEN 580426(Engine part only)